



BusWorks® 900EN Series Modbus TCP/IP 10/100MB Industrial Ethernet I/O Modules

Industrial Grade:

Model 967EN-4008 Eight CH Differential Current Inputs

Model 968EN-4008 Eight CH Differential Voltage Inputs

Commercial Grade:

Model 967EN-4C08 Eight CH Differential Current Inputs

Model 968EN-4C08 Eight CH Differential Voltage Inputs

USER'S MANUAL



ACROMAG INCORPORATED
30765 South Wixom Road
Wixom, MI 48393-2417 U.S.A.

Tel: (248) 295-0880
Fax: (248) 624-9234
Email: sales@acromag.com
Web: <http://www.acromag.com>

Copyright 2009-2014 Acromag, Inc., Printed in the USA.
Data and specifications are subject to change without notice.

8500806G

TABLE OF CONTENTS

Symbols on equipment:



Means "Refer to User's Manual (this manual) for additional information".

The information of this manual may change without notice. Acromag makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Further, Acromag assumes no responsibility for any errors that may appear in this manual and makes no commitment to update, or keep current, the information contained in this manual. No part of this manual may be copied or reproduced in any form without the prior written consent of Acromag, Inc.

For additional information, please visit our web site at www.acromag.com and download our whitepaper 8500-765, Introduction to Modbus TCP/IP, or 8500-648, Introduction to Modbus.

This product is compatible with Internet Explorer 7 and Mozilla Firefox v2.0

Windows® is a registered trademark of Microsoft Corporation.

IMPORTANT SAFETY CONSIDERATIONS


You must consider the possible negative effects of power, component, wiring, sensor, or software failure in the design of any type of monitoring or control system. This is very important where property loss or human life is involved. It is important that you perform satisfactory overall system design and it is agreed between you and Acromag, that this is your responsibility.

GETTING STARTED


MOUNTING AND DIMENSIONS.....	3
CONTROLS & INDICATORS.....	3
ISOLATION BARRIERS.....	3
CONNECTIONS.....	4
DIN-Rail Mounting & Removal.....	4
Network.....	4
Power.....	6
Earth Ground.....	7
Analog Inputs.....	7
Analog Common.....	8
WEB BROWSER.....	9
Home Page.....	9
Password Configuration Page.....	10
Network Configuration Page.....	10
i2o Configuration Page.....	13
Input Configuration Page.....	16
Test Page.....	21
Calibration Page.....	22
Utility Page.....	29
TROUBLESHOOTING.....	31
Diagnostics Table.....	31
Trouble Browsing Your Module?.....	33
Getting Out Of Trouble & Sanitation.....	33

TECHNICAL REFERENCE


KEY FEATURES.....	34
HOW IT WORKS.....	35
MODBUS REGISTERS.....	36
Register Functions.....	36
Register Mirroring.....	37
Data Types.....	38
Register Map.....	39
Default Register Settings.....	44
SPECIFICATIONS.....	45
Model Numbers.....	45
Analog Inputs.....	45
Memory.....	48
Enclosure and Physical.....	49
Agency Approvals.....	49
Environmental.....	49
Reliability Predictions (MTBF).....	50
Ethernet Interface.....	51
Controls & Indicators.....	51
ACCESSORY CABLES.....	52
Patch Cable & Crossover Cable.....	53
REVISION HISTORY.....	55

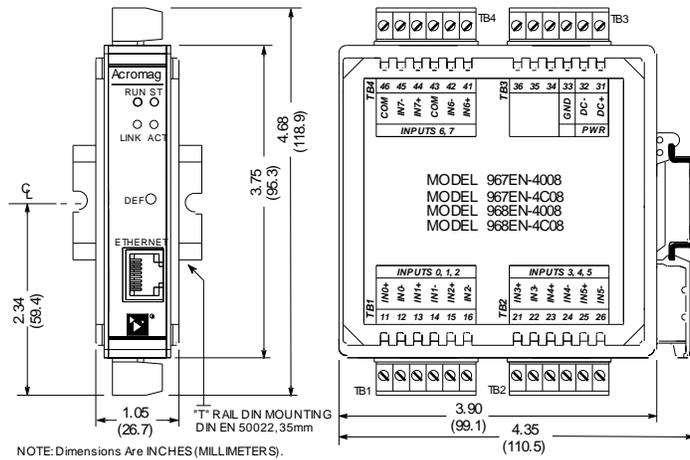

MODEL 967/8EN ENCLOSURE DIMENSIONS

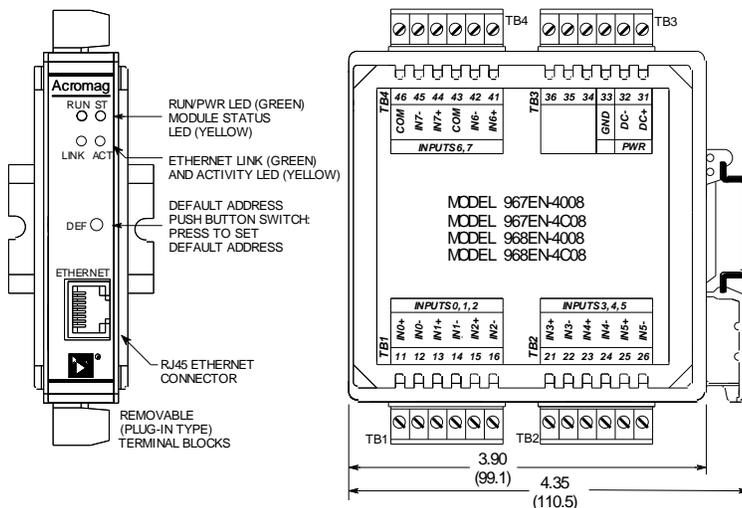

The front panel DFT push-button is used to toggle the module into or out of Default Mode. In Default Communication Mode, the module assumes a fixed static IP address of "128.1.1.100", a default subnet mask of "255.255.255.0", a default username of "User", and a default password of "password". To activate, depress the DFT button for 5 seconds, until the ST LED blinks on/off slowly. To disable, depress the DFT button for 5 seconds or until the ST LED stops blinking.

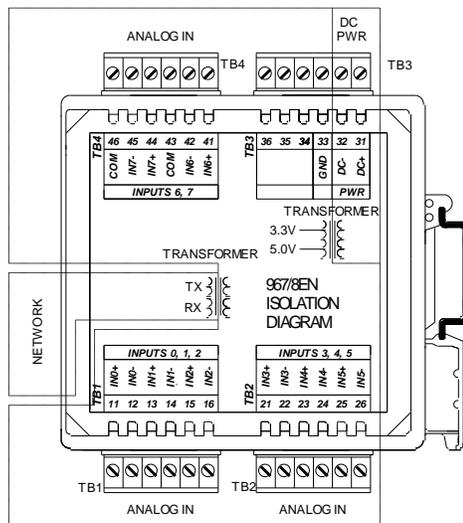

MOUNTING AND DIMENSIONS

Unit mounts to "T" type DIN rails (35mm, type EN50022).

Units may be mounted side-by-side on 1-inch centers.

WARNING: IEC Safety Standards may require that this device be mounted within an approved metal enclosure or sub-system, particularly for applications with exposure to voltages greater than or equal to 75VDC or 50VAC.

CONTROLS & INDICATORS

Green Run LED is ON if power is on and will blink in "wink" ID mode.

Yellow ST LED blinks ON/OFF slowly if module is in default communication mode.

Green LINK LED is ON if auto-negotiation has successfully established a connection.

Yellow ACT LED signals PHY network Activity (busy).

ISOLATION BARRIERS


Dashed Lines denote isolation barriers.

The I/O circuit, network, and power circuits are isolated from each other for safety and noise immunity.

CONNECTIONS

DIN-Rail Mounting & Removal

When attaching the module to the T-type DIN rail, angle the top of the unit towards the rail and locate the top groove of the adapter over the upper lip of the rail. Firmly push the unit towards the rail until it snaps into place. To remove, first separate the input terminal block(s) from the bottom side of the module to create a clearance to the DIN mounting area. Next, while holding the module in place from above, insert a screwdriver into the lower arm of the DIN rail connector and use it as a lever to force the connector down until the unit disengages from the rail (do not twist the screwdriver to avoid damaging plastic).

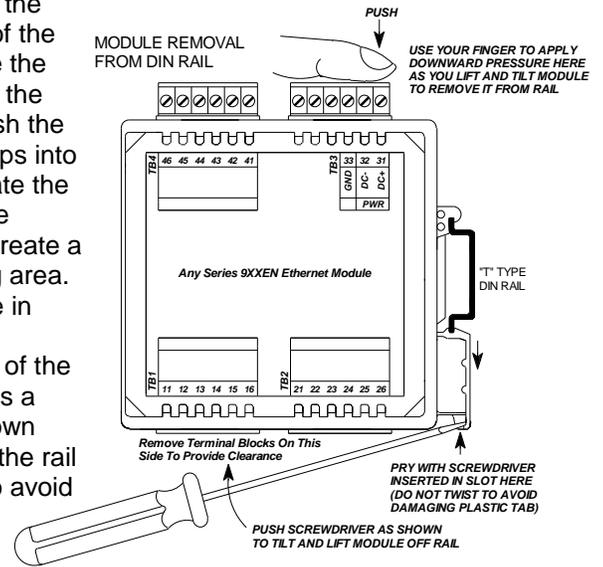

Network

For 100Base-TX systems, at a minimum, use data grade Unshielded Twisted-Pair (UTP) wiring that has a 100Ω characteristic impedance and meets the EIA/TIA Category 5 wire specifications.

It is recommended that you use a CAT-5 cable to connect this device to your PC.

For 10Base-T systems, you may use Category 3, Category 4, or Category 5/5E UTP/STP cable.

In either case, you are limited to 100 meters between any two devices.

RJ45 MDI AND MDI-X CONNECTIONS


PIN	MDI WIRING	MDI-X WIRING
1	Transmit +	Receive +
2	Transmit -	Receive -
3	Receive +	Transmit +
4	Not Used	Not Used
5	Not Used	Not Used
6	Receive -	Transmit -
7	Not Used	Not Used
8	Not Used	Not Used

Note Crossover Connections

MINIMUM RECOMMENDED CABLE


SPEED	DISTANCE	CABLE
10Base-T	100M	CAT 3, CAT 4, or CAT 5 UTP/STP
100Base-T	100M	CAT 5 UTP/STP

ETHERNET PORT

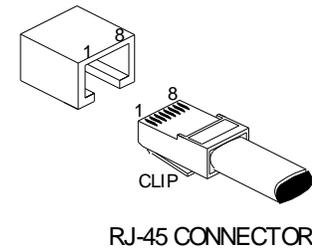

The Ethernet port of this unit is wired MDI-X by default, but includes automatic crossover (the Ethernet port of your PC is typically wired MDI). Thus, you can use either a straight-through or crossover cable to connect this device directly to a PC, Ethernet switch, or another unit.

**CROSSOVER CABLE
FOR MDI TO MDI
OR MDI-X TO MDI-X**

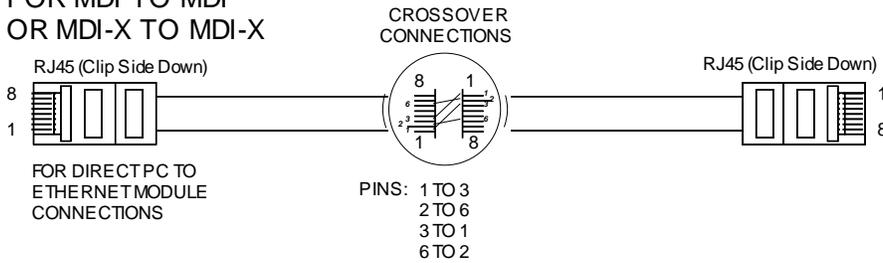

From the factory, the 967/8EN unit has a default IP address setting of 128.1.1.100, and a class C subnet mask of 255.255.255.0. This defines a restricted default address domain that your current network cannot address directly, unless you first create an exclusive subnet targeted to the 967/8EN. This typically involves a process by which you either change the address of your current network interface card (which will temporarily disable it from your own network), install a second network interface card, or obtain an unused PC or laptop with a NIC installed. In any case, you must set the address of your network interface card to an address within the default address domain of the Acromag unit. That is, an address from 128.1.1.0 to 128.1.1.255, except for 128.1.1.0 which is typically reserved for servers, and 128.1.1.100, which is the default address of the 967/8EN itself. Once you are able to address the unit at its default address, you can then reconfigure its IP address setting to an address more meaningful to your own network. Application Note 8500-734 is downloadable from the Acromag website and covers this process in greater detail.


CONNECTIONS

Network

A crossover cable simply connects the differential transmit pair on each end, to the receive pair on the opposite end.

Use a standard (direct) cable when connecting to a hub or switch port, which are generally wired MDI-X.

HOST PC CONNECTED DIRECTLY TO A MODULE

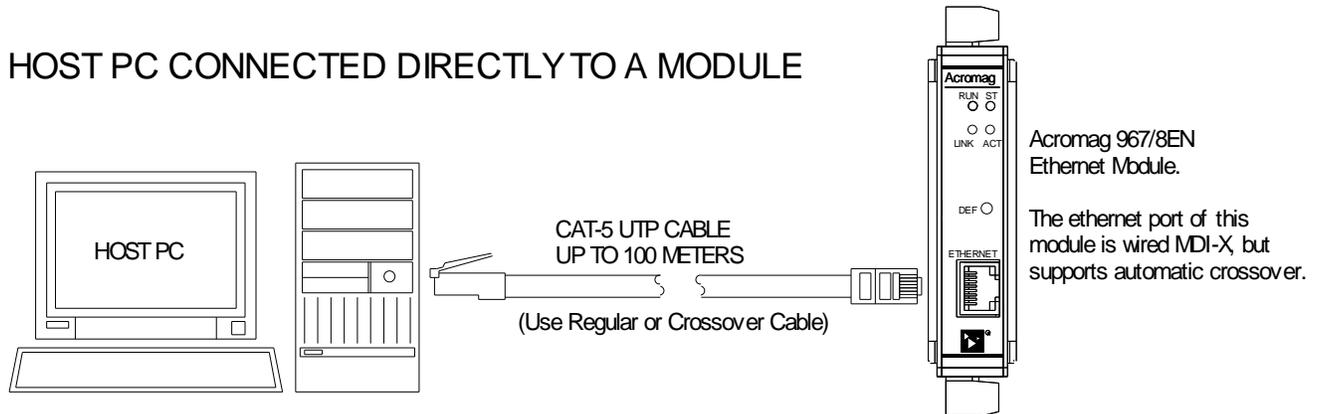


Refer to the Accessory Cables section at the back of this manual for more information on accessory cables including patch and crossover cables available from Acromag and other vendors.

TIP: You can significantly enhance the EMI/RFI performance of your network connections by using Category 5E STP cable (Shielded Twisted Pair) with shielded RJ45 plug connectors. This will also help to protect your installation from damage due to ESD (Electro-Static Discharge). The use of shielded cable is strongly recommended for installations in harsh industrial environments and/or in the presence of strong electrical fields.

CONNECTIONS

Network


You can use an Ethernet switch or switching hub to build a network of Ethernet modules, similar to that shown below. This drawing shows how to network-connect these modules to a 5-port Ethernet switch (Acromag Model 900EN-S005). Note that the 900EN-S005 switch includes automatic MDI/MDI-X crossover and straight-through or crossover cable(s) may be used, but it is generally not good practice to use crossover cables when connecting to an auto-crossing switch.

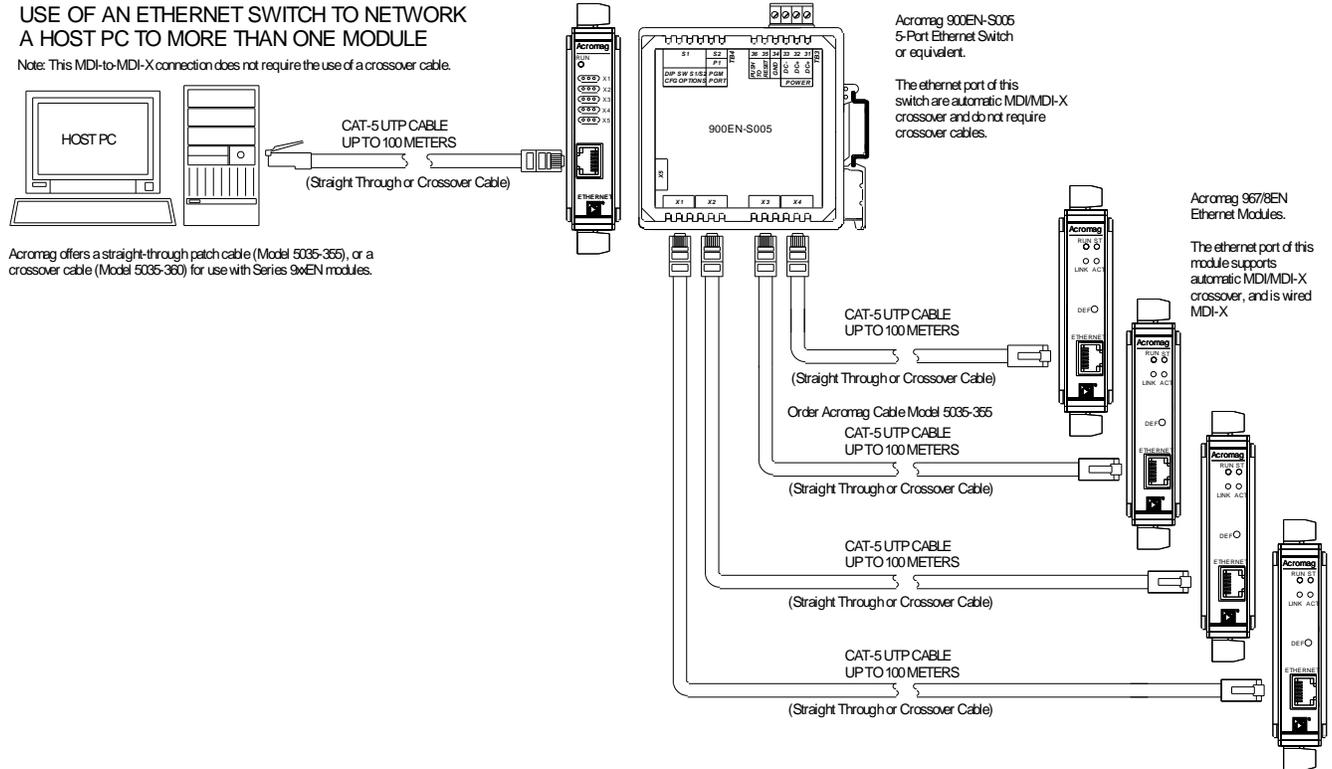

Power

- ✓ Connect 18-36V DC to the power terminals labeled DC+ & DC-. Observe proper polarity. For supply connections, use No. 14 AWG wires rated for at least 75°C. **CAUTION:** Do not exceed 36VDC peak.

Voltage	Current (Typ)	Current (Max)
18 VDC	82 mA	98.4 mA
24 VDC	63 mA	74.4 mA
36 VDC	44.8 mA	53.8 mA

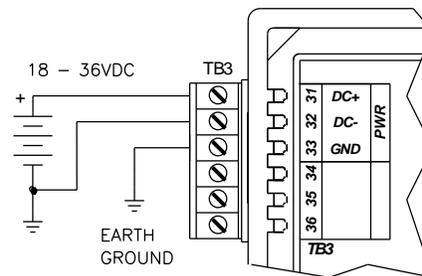

CAUTION: Risk of Electric Shock – More than one disconnect switch may be required to de-energize equipment before servicing.

IMPORTANT – External Fuse: If unit is powered from a supply capable of delivering more than 1A to the unit, it is recommended that this current be

limited via a high surge tolerant fuse rated for a maximum current of 1A or less (for example, see Bel Fuse MJS1).

- ✓ Connect Earth Ground as shown in the connection drawings on previous page. Additionally, connect the GND terminal (TB3-3) to earth ground.

The ground connections noted are recommended for best results. If sensors are already grounded, use caution and avoid making additional ground connections which could create ground loops.



The module housing is plastic and does not require its own earth ground. Transient energy is shunted to the GND terminal via isolation capacitors and transient voltage suppressors. You must connect earth ground to complete this path and ensure protection. Additional earth grounding is also recommended at input analog common (see connection drawings).

- ✓ Connect analog current (967EN), or voltage (968EN) signals to the input terminals as shown below. Input channels are differential. TB1 and TB2 each support 3 differential input channels while TB4 supports 2 differential inputs and two Common returns (C). The common connections are optionally used to reference input channels to analog common if they would otherwise be left floating. This terminal is also used to reference the input circuit common to earth ground.

Current Inputs (967EN Models Only)

Input is bipolar differential, which allows current to be input on either lead, positive or negative. Current ($\pm 20\text{mA}$) is converted to voltage ($\pm 4.0\text{V}$) via precision 200Ω shunt resistors inside the unit. This voltage drives a 16-bit A/D with an input range of $\pm 10\text{V}$.

NOTE: YOU MAY INPUT CURRENT ON EITHER LEAD WITH BIPOLAR DIFFERENTIAL INPUT.

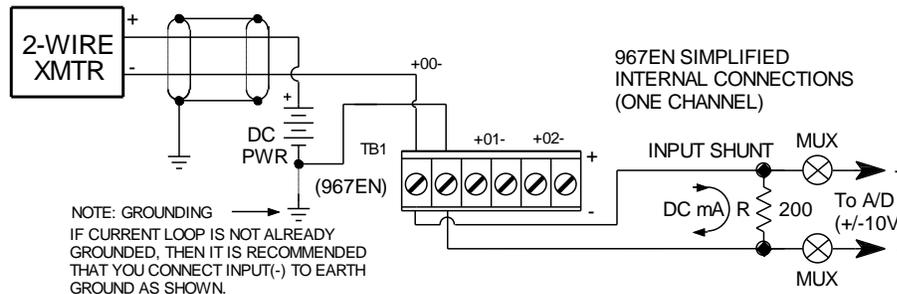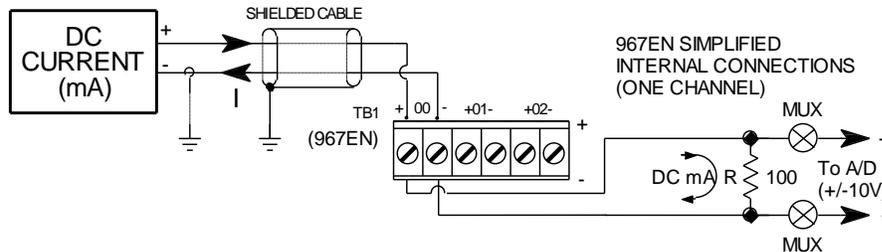

CONNECTIONS

Earth Ground


Warning: To comply with safety and performance standards, use shielded cable and connect earth ground as noted. Failure to use good wiring and grounding practices may be unsafe and negatively affect performance.

Analog Inputs

The Common (C) terminal is connected to analog common of the circuit. This is used to reference analog input common to earth ground, and to reference any differential input channels to earth ground if they would otherwise be left floating.


CONNECTIONS

Analog Inputs

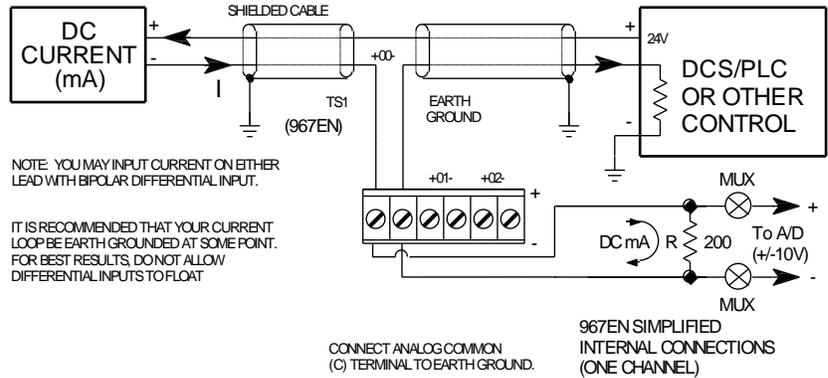

Voltage Inputs (968EN Models Only)

You can set the channel to accept fixed voltage input ranges of ±10V, or ±5V. You may also rescale a portion of ±10V A/D range to smaller sub-ranges, down to a minimum span 1/16th of the native span in order to maintain minimum 12-bit performance.

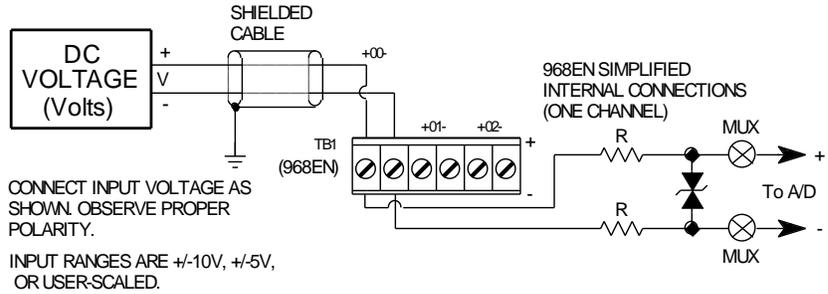

Connect input voltage to input positive (+) and negative (-) while observing proper polarity. If the input source is floating, it is recommended that you connect the negative input to the analog common terminal of the port (terminal C). Additionally, analog common (C) should also be connected to earth ground.


Analog Common

- ✓ Common connects to analog common of the differential input circuit and is provided in order to ¹reference the input circuit to earth ground, and ²to reference a differential input signal to analog common if it would otherwise be left floating. Check your grounding scheme if inputs are clamped or appear unstable. There are two “C” terminals on TB4 for this purpose. You only need to connect earth ground to one of these to earth ground the input circuit, as they are all connected in common.


DIFFERENTIAL INPUT GROUND REQUIREMENTS

- ① GROUNDED INPUT SOURCE
- ② UN-GROUNDED INPUT SOURCE
- ① ② CONNECT EARTH GROUND TO COMMON (C) TERMINAL TO KEEP INPUT CIRCUIT FROM FLOATING.
- ②

IT IS RECOMMENDED TO CONNECT INPUT(-) TERMINAL TO COMMON (C) IF INPUT SIGNAL IS NOT ALREADY GROUNDED TO KEEP DIFFERENTIAL INPUTS FROM FLOATING.

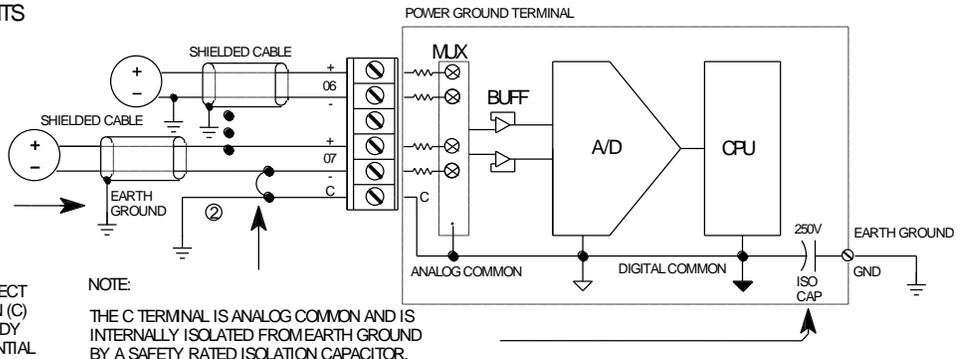

This module supports Modbus over TCP/IP. You may use your own software to issue Modbus commands to this module (see Modbus Registers), or you may use a standard web browser, as these modules have built-in web pages that allow you to setup and control the module. Simply execute your web browser, type the IP address assigned to your module in the “Address” window (<http://128.1.1.100/> for our example), click [Go], and you will be presented with a Home Page window similar to that shown below:

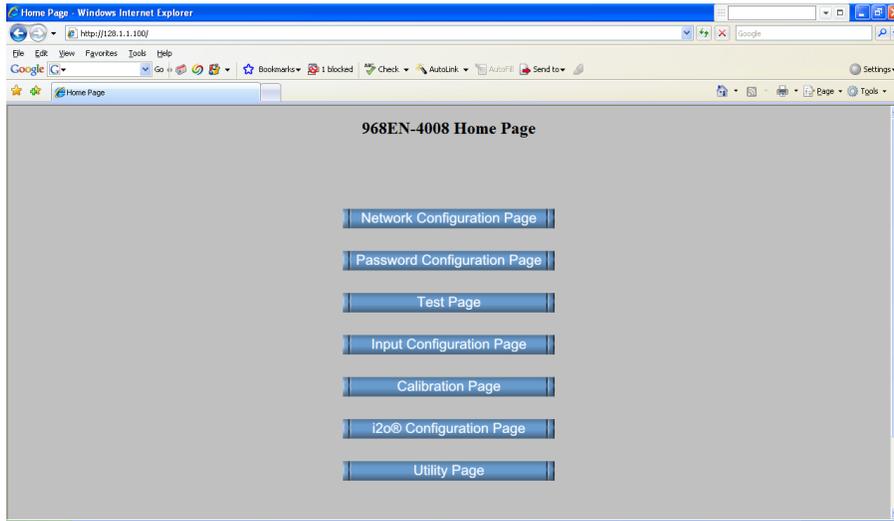

For each new browser session that accesses the Home Page of this module, you will be presented with a window prompting you to enter the current User Name and Password as shown on the following page. This information is required before the program will allow you to make any other selections. **The default user name and password is “User” and “password00” respectively.** After entering these defaults, you may wish to invoke the Password Configuration Page to change these parameters to something more meaningful to you.

IMPORTANT: If you forget your user name & password, you can always toggle the unit into default mode via the DFT button at the front of the unit (hold this button for 5 seconds to invoke default mode). In this mode, the password and username will revert to the original defaults noted at left (unit assumes IP address 128.1.1.100), allowing you to re-invoke the Password Configuration Page and change the username and password as required.

WEB BROWSER


Home Page

The Home Page provides buttons to access the other web pages of this module that are used to configure the network parameters, change the user name and password, and operate the module.

Note: If you cannot download the module's web page, it may be that the address of your network interface adapter is not set to a valid IP address within the module's default address domain. Refer to Applications Note 8500-734 for information on how to accomplish this.

WEB BROWSER

Password Configuration Page

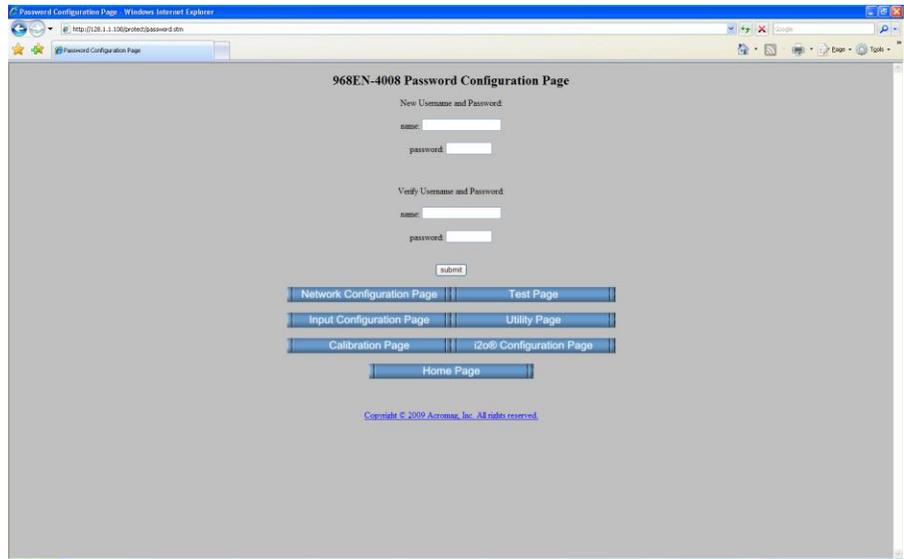


Use up to 20 alphanumeric characters (case sensitive) to specify your username, and 10 alphanumeric characters (case sensitive) to specify a password. You will have to type these entries in twice to help prevent errors.

Click the **submit** button to write your changes to the module.

After completing your username/password changes, click on the appropriate button at the bottom of the page to select another web page. If you made changes, you may be prompted to re-enter your new username and password before being permitted to move to other pages.

Network Configuration

After setting your username and password, you can click the “Network Configuration Page” button, and a screen similar to that shown below will appear. Use this screen to set the network configuration parameters for your module (these parameters cannot be set via Modbus registers). You may have to consult your network administrator to complete the contents of this page.

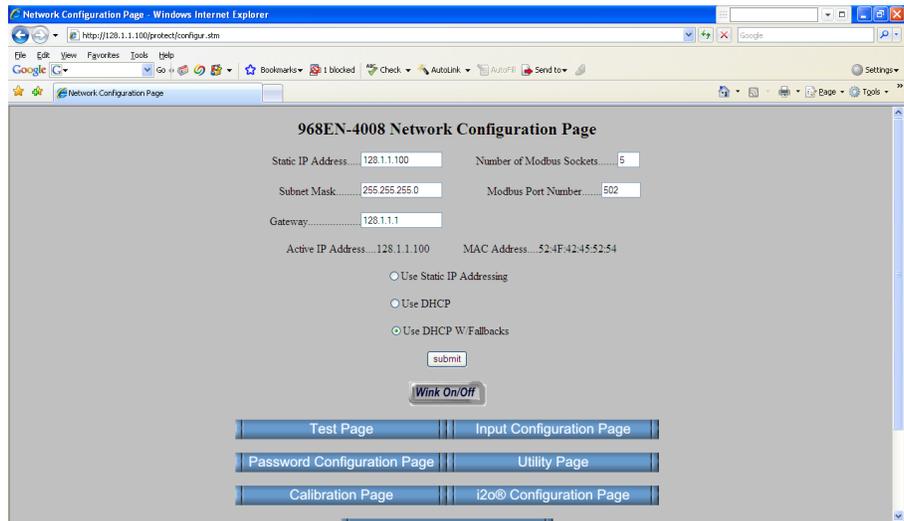

A **Static IP Address** is as the name implies—*static*, and represents a unique fixed IP Address that is generally assigned by your service provider or system administrator. The Default Mode static IP address assigned to this module is 128.1.1.100 (refer to product side label).

An **IP Address** is a unique identification number for any host (this module) on any TCP/IP network (including the internet). The IP address is made up of four octets (8 bits), each octet having a value between 0-255 (00H-FFH). It is expressed here in decimal form, with a period placed between octets.

Note: If you are in Default Mode when you change the IP address noted, then when you click submit, your unit will leave the default mode and will assume the new IP address. This will look like you lost communication with your web browser, but you simply need to change the web browser address to continue communicating with the unit.

Note: In order to network your PC with an Acromag module, you may have to consult with your network administrator and either temporarily change the IP address in your TCP/IP configuration (see TCP/IP Properties of Network Configuration in Windows), or create a separate private network using a second network adapter installed in your PC (recommended). This is because your IP address is likely set to an address that is outside of the address domain of the unit's default IP address. The necessary steps for setting up this interface address will vary with your operating system. Refer to Acromag Application Note 8500-734, or document 8500-815, for help accomplishing this (located on the CDROM shipped with your unit or via download from our web site at www.acromag.com).

The **Number of Modbus Sockets** refers to the number (1-5) of Modbus TCP/IP access points to allow for this host. The default allows up to 5 sockets, but you can restrict access by reducing this number.

If this unit were an i2o target device (it has its outputs controlled by another units inputs), then each i2o message sent to this device will require a socket and the Number of Sockets must be increased to allow for this.

A **socket** is a software mechanism that connects an application to a network protocol (socket is a software object, not a physical object). For example, a Modbus application program can send and receive TCP/IP messages by opening a socket and reading and writing data to and from the socket.

On TCP/IP and UDP networks, a port is an endpoint to a logical connection (a connection port) and the way that a client program specifies a specific server program on a computer network.

For example, a Modbus program will open TCP port 502 to be readable from other Modbus devices on the network (which also use port 502 to establish a connection). A port may have more than one socket active at a time and this server device will allow up to 5 sockets to operate simultaneously over its contact port 502.

A **Subnet Mask** is used to subdivide the host portion of the IP address into two or more subnets. The subnet mask will flag the bits of the IP address that belong to the network address, and the remaining bits correspond to the host portion of the address. The unique subnet to which an IP address refers to is recovered by performing a bitwise AND operation between the IP address and the mask itself, with the result being the sub-network address.

WEB BROWSER

Network Configuration

This module can be placed into a default communication mode via the DFT push-button at the front of the module. To activate, hold the DFT button for 5 seconds. The Status LED will start a slow blinking to indicate default mode.

Default Mode uses a static IP address of "128.1.1.100", a default subnet mask of "255.255.255.0", a default username "User", and a default password "password00".

Note that Acromag Series 9xxEN Ethernet I/O modules may take up to 15 seconds to boot upon power-up, depending on your network configuration and whether a DHCP server is present.

WEB BROWSER

Network Configuration

The **Modbus Port Number** is set to port 502 by default, which has been reserved for Modbus applications. Port numbers represents an endpoint or "channel" for network communications. In this way, every IP address is divided into many ports, and when one computer sends data to another computer, it sends the data from a port of an IP address to a port on another IP address. Any one port can only be used by one program at a time. The use of port numbers allows different applications on the same computer to utilize network resources without interfering with one another. The port number could range from 0-99999, but most popular applications will use port numbers at the low end of this range already set aside for specific applications (such as 502 for Modbus, or 80 for HTTP). For example, ports make it possible for you to check your email and browse the web at the same time, because web browsers use port 80, while retrieving your email uses port 110.

Gateway refers to the IP Address of the gateway, if your local area network happens to be isolated by a gateway. Typically, it is assigned the first host address in the subnet. If a gateway is not present, then this field should contain an unused address within the host subnet address range.

A gateway is a device which links dissimilar networks and transfers data between them at the application layer level. In this way, Gateways essentially convert messages from one protocol to another.

The **Active IP Address** refers to the current IP Address being used by this host, as opposed to any new assignments being made via this page.

The **MAC Address** refers to the Media Access Control address that uniquely identifies the MAC hardware of this device. All Ethernet devices have their own MAC address. This is a unique fixed address that was assigned to the MAC at its manufacture. It is not to be confused with the dynamically assigned 32-bit IP Address, commonly denoted as four 8-bit numbers separated by periods (e.g. 128.1.1.100). Every manufacturer producing Ethernet hardware, has by assignment, a series of 48-bit addresses to use. They are restricted to use only the addresses in their series, and only one time, thus ensuring that no two computers in the world will ever have the same network address.

An Ethernet packet will include two 48-bit address fields appended to it that represent the MAC address of the sending computer, and the destination computer. In IEEE 802 networks, the Data Link Control (DLC) layer of the OSI Reference Model is divided into two sub-layers: the Logical Link Control (LLC) layer, and the Media Access Control (MAC) layer. It is the MAC layer that interfaces directly with the network media and where this address distinction is applied (each different type of network media requires a different MAC layer).

Use Static IP Addressing tells this unit to fix the IP address setting to the Static IP Address specified. By default, the unit is set to use Static IP Addressing and a Static IP Address of 128.1.1.100.

You can optionally choose to have the IP address assigned dynamically via DHCP/BOOTP, or DHCP/BOOTP w/Fallbacks. This will also require that you specify a valid Host Name (see above).

Use DHCP tells the unit its IP address is to be obtained dynamically, and may change each time this device is connected to the network.

Use DHCP w/ Fallbacks works the same way, but will revert to the static IP address specified if your DHCP server cannot be found.


DHCP refers to Dynamic Host Configuration Protocol and its routine for assigning dynamic IP addresses to devices on a network. With dynamic addressing, a device can have a different IP address every time it connects to the network, and in some systems, the IP address can even change while it is still connected.

Click the **Submit** button to complete any changes made on this page.

Click the **Wink On/Off** button to toggle the module in/out of “wink” ID mode. In this mode, the module’s green RUN LED will blink to confirm identification.

The unit includes a default address push-button to cause the module to assume a fixed default static IP address (128.1.1.100). This button is at the front of the module and is used to toggle the module into, or out of Default Mode. If you use the push-button at the front of the module to place the module in default mode, then “Default Communications Mode” will be indicated at the bottom of this screen.

This unit includes a special remote messaging functionality called i2o, for input-to-output communication. This allows an i2o source (like this unit) to send input data to an output channel on any compatible BusWorks® model over the network. The i2o Mapping page is shown below and used to specify the static IP addresses of the targeted remote unit(s). Use the scroll adjustment to view the entire page as shown. You can elect to send this units input data to the target unit cyclically at the update rate specified, or upon a % of input span change since the last update.

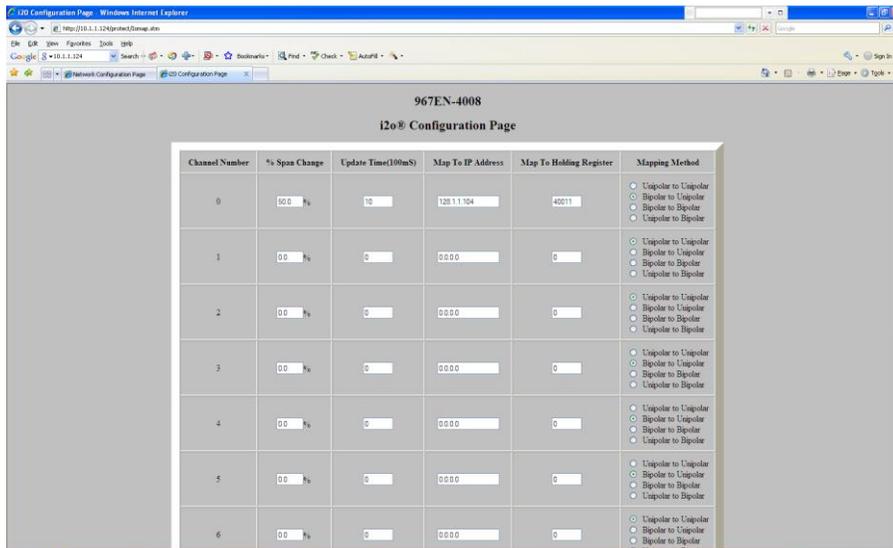

This unit has 1 port of 8 input channels of current (967EN), or voltage (968EN). For simplicity, the bipolar analog I/O channels of BusWorks modules are all normalized to ±20000 counts, representing ±100%. Likewise, BusWorks unipolar channels are normalized to 0-20000, representing 0-100%.

WEB BROWSER

Network Configuration

i2o Configuration Page



Note: The i2o mapping feature may only be configured via the built-in web browser page as there are no Modbus registers for specifying these parameters.

While this unit supports Modbus TCP/IP and UDP/IP, i2o messages are only sent via Modbus TCP/IP.

The i2o messaging will consume one TCP/IP socket on the target device.

The i2o target device must have a static IP address in order to process i2o messages.

WEB BROWSER

i2o Configuration Page

This messaging function works best if the target unit(s) are already online and ready to receive messages. It will still work if the target output units come online after the input units, but may take several minutes to "discover" the network targets and begin transmitting to them.

Likewise, if the input unit or the target unit(s) go offline, remote messaging will resume on its own when the connection is re-established, but this "healing" function may take several minutes depending on which device(s) went offline, why, and for how long.

Note that if you happen to perform the procedure for restoring a unit to its original configuration as outlined in the "Getting Out Of Trouble" section of this manual, all of the mapping variables are returned to their default values and any i2o mapping will have to be reconfigured.

You can use i2o to map any input channel(s) of this model, to output channel(s) on a compatible target unit, or to separate units.

WARNING: The i2o mapping feature of this model maps each input channel to one output channel on another unit. You must specify the correct output register address on your target unit, or it won't work and you may inadvertently change the configuration of your target output device.

Example i2o Target Output Devices Compatible With This Unit

972EN: Up to 6¹ Current Output Channels, Registers 40019..40024

973EN: Up to 6¹ Voltage Output Channels, Registers 40019..40024

951EN: Up to 2 Current Output Channels, Registers 40101..40102

952EN: Up to 2 Voltage Output Channels, Registers 40101..40102

¹**Note:** The 972/973EN comes in a 4 channel and 6 channel variety.

The analog input data may be transferred cyclically, or upon exceeding a stated count input range span since the last update. However, if you select percent of span, you will still need to specify a cyclic update rate in order to keep the communication socket open and prevent a timeout if your %Span changes happen to occur at intervals greater than 90 seconds apart.

If you select a time of 0 with %Span specified, a default time value of 90 seconds will be used to ensure the connection remains open (i2o uses TCP/IP which is a connection-oriented protocol). You may want to make the update time longer to conserve network bandwidth while still preventing a timeout. If you disable %Span, then your output control messages will occur at every interval of your update time (for times greater than or equal to 0.5 seconds). Setting the update time to 0 disables cyclic messaging. Setting it to a time less than 0.5s may be less deterministic.

IMPORTANT: This module is designed to function as a Modbus TCP/IP slave/server. Normally, Modbus servers are not allowed to initiate messages on their own and may only respond to client/master requests. The i2o functionality of this unit is a special application that may cause confusion for some master/client devices linked to the same network. To avoid problems, other master devices on the network should be restricted from attempting to control i2o target devices. You can also make use of the "Number of Sockets" parameter to limit access to an i2o target device.

Note that i2o inputs map externally to outputs on compatible target devices. Individual inputs may even be mapped to separate outputs on different units at different IP addresses.

Subsequent messages will be sent at a periodic rate specified via the update time. Note that the target output channel may still be controlled independently, but its level will be overwritten by subsequent mapped i2o messages when this feature is enabled. To avoid problems, it is recommended that you do not attempt to separately control the mapped analog output ports directly.

% Span Change: Set the count input range span change since the last input update, that when equaled or exceeded at any port channel, will trigger the input data of the port to be sent to the specified output port(s). For example, if you set this field to 10% of a ±10V input range, then a change in signal of 2V or greater will trigger the i2o transfer.

WEB BROWSER**i2o Configuration Page**

Update Time (x100ms): Specify the time between messages as a multiple of 100ms from 1 to 900 (0.1-90 seconds). Specify 0 to turn cyclical i2o messaging OFF. If %Span is set to a non-zero value, a default time of 600 will be used (60 seconds) to keep the connection open. Times less than 5 (0.5s) will be less deterministic and are not recommended.

Map To IP Address: This is the Static IP Address of a compatible target output device. Any input may be mapped to an output, or to separate outputs at two different IP addresses. You should never map different channels to the same output. Use "0.0.0.0" to turn this field back to its default (inactive) status.

Map To Holding Register: This is the output holding register address of an output channel on a compatible i2o target. Refer to the prior page for compatible models and their corresponding output channel register addresses.

Mapping Method: This selection essentially tells the firmware how to map 0 at the input, to the output. In some cases, the input signal range is bipolar and normalized to ± 20000 counts, while the output channel is unipolar and normalized to a 0-20000 count. For simplicity, all BusWorks model I/O ranges are normalized to these same values. But you can use i2o to map unipolar input ranges to bipolar output ranges, and visa versa. Selecting Uni-Uni or Bi-Bi will cause 0V/0mA at the input to equal 0% of the output range. Selecting Bi-Uni will cause 0V/0mA at the input to equal 50% of the output range. Selecting Uni-Bi will cause 0V/0mA at the input to equal -100% of the output range. The mapping method tells the firmware how to map the endpoints between the i2o input and the i2o target as follows:

i2o Input-to-Output	Ideal Endpoint Effect
Unipolar-to-Unipolar	Direct Unipolar Mapping: Maps 0-20000 (0-100%) at input to 0-20000 (0-100%) at output.
Bipolar-to-Bipolar	Direct Bipolar Mapping: Maps ± 20000 ($\pm 100\%$) at input to ± 20000 ($\pm 100\%$) at output.
Bipolar-to-Unipolar	Maps -20000 (-100%) to 0, 0 to 10000 (50%), and +20000 (+100%) to 20000 (+100%)
Unipolar-to-Bipolar	Maps 0 (0%) to -20000 (-100%), 10000 (50%) to 0, and +20000 (+100%) to +20000 (+100%).

Note that you can mismatch your selections relative to the I/O in order to truncate portions of your I/O range. For example, if I have a bipolar input and a unipolar target, and I select Unipolar to Unipolar, then the negative portion of my input (-20000 to 0, -100% to 0%) will map to 0, while the positive portion of my input maps directly to my output (0-20000, 0-100%).

Select "Bipolar" to map bipolar inputs to bipolar outputs, or select "Unipolar" to map -20000 (-100%) of the input to zero output (0%). If "Bipolar" is selected for an output that is unipolar, then the negative input range (-100% to 0) will map to zero at the output (truncated). Likewise, if I select Unipolar-to-Bipolar for an input that is bipolar, then your negative input range may achieve unexpected/invalid output values. Be sure to make these selection properly to avoid unexpected results.

WEB BROWSER

i2o Configuration Page

Case Study – Example i2o Operation

CASE	%SPAN CHG	UPDATE TIME	IP ADDRESS
Case 1	0	250	Non-Zero Address
Case 2	25.0	0	Non-Zero Address
Case 3	25.0	250	Non-Zero Address
Case 4	XX	XX	0.0.0.0 (Zero Address)
Case 5	0	0	Non-Zero Address

Results:


- CASE 1: The current input value is sent via i2o every 25 seconds.
- CASE 2: An i2o message is sent whenever the input changes by more than 25% of the input span. Additionally, the module will send a “heartbeat” message every 60 seconds to keep the receiving socket open and ready for input. This heartbeat value is the current %SPAN reference value (the last value sent if a new %SPAN value has not occurred).
- CASE 3: An i2o message is sent whenever the input value changes by more than 25% of the input span. Additionally, an i2o message containing the current input value will be sent every 25 seconds and the new reference value becomes the current input value.
- CASE 4: No i2o messages will be sent.
- CASE 5: No i2o messages will be sent.

Input Configuration Page


After completing the username & password assignment, plus the network configuration parameters, use the Input Configuration page to set your input ranges, rescale inputs, setup integration/totalization, setup floating point (required for scaling/integration/totalization), reset the totalizer, enable/disable scan groups, and reset the unit.

Once you have carefully made your selections, click the “Channel Configuration Submit” button at the bottom of the page to activate your configuration (reconfiguration takes effect immediately following “Channel Configuration Submit”).

After completing the username & password assignment, plus the network configuration parameters, use the Input Configuration page to set your input ranges, rescale inputs, setup integration/totalization, setup floating point (required for scaling/integration/totalization), reset the totalizer, and reset the unit.

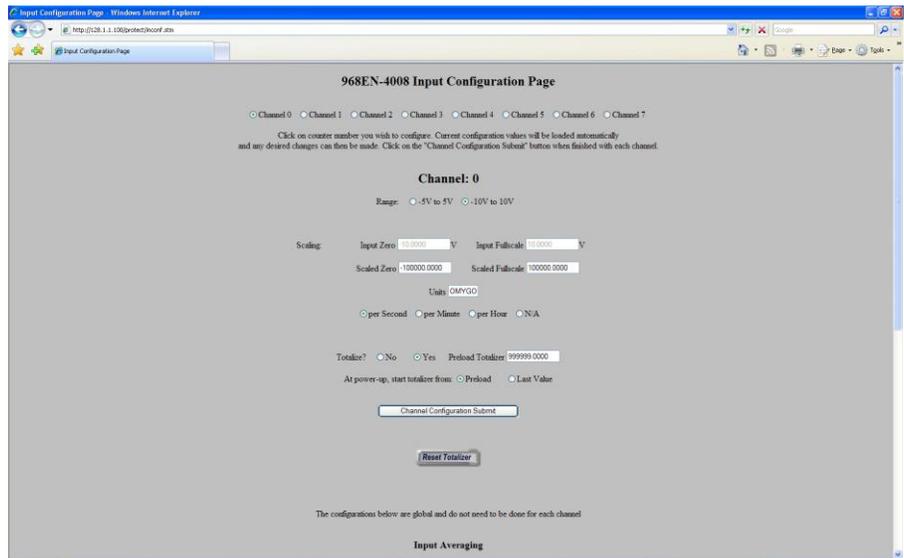

Use the scroll bars on the right to scroll down the page.

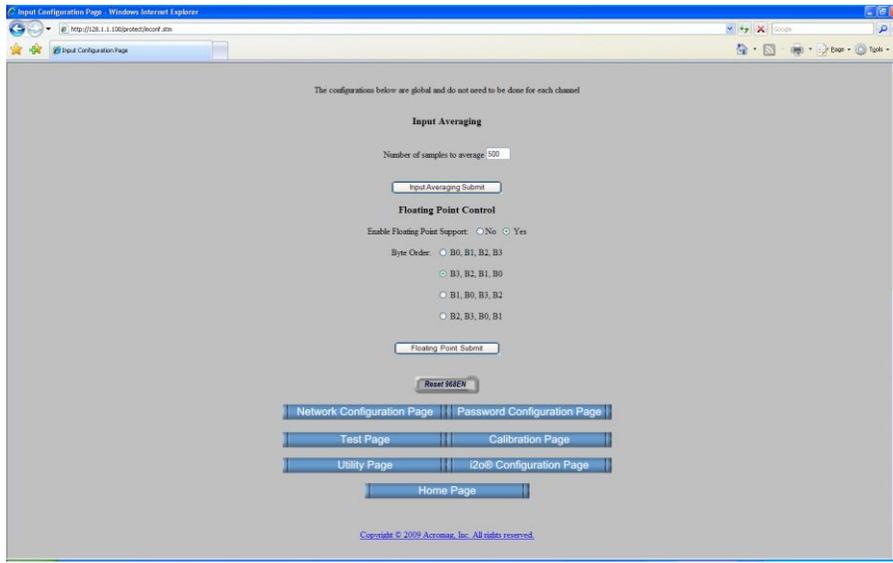

WEB BROWSER

Input Configuration

For the 968EN, you can select an input range of $\pm 5V$, or $\pm 10V$. Each of these ranges can be rescaled to your own engineering units.

For the 967EN, all current input ranges are sub-ranges of the native $\pm 10V$ A/D input range, and utilize a precision 200Ω input shunt to convert input current to A/D voltage ($\pm 20mA$ into 200Ω yields $\pm 4.0V$ to the A/D).

Once you have carefully made your selections, click the "Submit" button to activate your reconfiguration (reconfiguration takes effect immediately following clicking "Submit").

These models have eight input channels of current (967EN), or voltage (968EN). The Input Configuration page of the 968EN voltage unit is shown above. The 967EN is identical, except that it refers to current ranges.

Input Configuration (Repeated Per Channel)

You must repeat your reconfiguration for each channel of interest.

Configuration involves first selecting the input channel, its input range, and optionally rescaling the input's zero and full-scale value to your own engineering units. You can also setup an integrator by specifying the scaled input units and its time base in order to totalize the input. You can enable/disable totalization of an input, set its preload and initial value, and reset the totalizer. After you have made your channel specific selections, click the Channel Configuration Submit button to apply your selections.

967EN Current Input Models

Note: On 967EN models, a current input of $\pm 20mA$ ($22mA$ maximum) may be input at the positive or negative input lead, but its sign is relative to current input at the + lead. A precision 200Ω shunt resistor converts $\pm 20mA$ to $\pm 4.0V$ at the A/D. The A/D has a native $\pm 10V$ input range configured (16-bits). Thus, the effective resolution of $\pm 20mA$ is 14.6 bits (± 13107 parts). The $\pm 20mA$ input is normalized to a count of ± 20000 for $\pm 100\%$ (over-range is 2000 counts).

Input Range: The current unit utilizes the $\pm 10V$ A/D input range and is designed for a bipolar current of $\pm 20mA$. All input ranges are sub-ranges of the native 16-bit A/D range of $\pm 10V$ ($\pm 20mA$ into 200Ω is $\pm 4.0V$ for 14.6 bits of resolution, or 1 part in 13107).

Input Zero (Fixed per Range): Default is same as input range zero ($20mA$, $0mA$, or $4mA$) and this cannot be changed. The indicated value will correspond to 0% of signal and a normalized count of -20000 for $\pm 20mA$ range, or 0 for the $0-20mA$ and $4-20mA$ ranges.

For the 967EN, all current input ranges are sub-ranges of the native $\pm 10V$ A/D input range and utilize a precision 200Ω input shunt to convert input current to A/D voltage ($\pm 20mA$ into 200Ω yields $\pm 4.0V$ to A/D).

WEB BROWSER

Input Configuration

967EN Current Input Models...continued

Scaled Zero: Default is the same as input zero (-20mA, 0mA, or 4mA), but you can rescale this value as required for your application. Field is limited to a 32-bit number of up to 12 characters and a maximum of 4 decimal places. For each channel 0-7, enter your rescaled full-scale that is to correspond to 0% of input signal. You must also Enable Floating Point Support to accomplish rescaling. If you are using only a portion of this range, you may have to interpolate your scaled zero endpoint.

Input Full-Scale (Fixed per Range): Default is the same full-scale as input range (+20mA) and this cannot be changed. The full-scale indicated will correspond to 100% of input signal and a normalized count of +20000.

Scaled Full-Scale: Default is the same as input full-scale (+20mA), but you can rescale this value as required for your application. Field is limited to a 32-bit number with up to 12 characters and a maximum of 4 decimal places. For each channel 0-7, enter your rescaled full-scale that is to correspond to 100% of input signal. You must also Enable Floating Point Support to accomplish rescaling. If you are using only a portion of this range, you may have to interpolate your scaled full-scale.

Units (5 characters): Enter the units of measure for your rescaled input zero and full-scale and this is an arbitrary definition used only for reference.

NOTE (967EN): By default, all 967EN current ranges are sub-ranges of a larger 16-bit $\pm 10V$ A/D input range. This bipolar input range allows the input current to be measured in either direction between the terminals. The 967EN employs a 200 Ω shunt resistor to convert the current signal to 4.0V full-scale (0.020A x200 Ω). This approximates 14.6-bit of resolution with an A/D resolution of ± 13107 parts for $\pm 20mA$.

968EN Voltage Input Models

Input Range: Select a 16-bit A/D input range of $\pm 10V$, or a 15-bit sub-range of $\pm 5V$.

Input Zero (Fixed per Range): Default is the same as input range zero (-5V or -10V) and this cannot be changed. The voltage indicated corresponds to 0% of signal and a normalized count of -20000.

Scaled Zero: Default is the same as input zero (-5V or -10V), but you can rescale this value as required for your application.. Field is limited to a 32-bit number with up to 12 characters and a maximum of 4 decimal places. For each channel 0-7, enter your rescaled value in engineering units that is to correspond to 0% of input signal. You must also Enable Floating Point Support to accomplish rescaling. If you are using only a portion of this range, you may have to interpolate your scaled zero endpoint.

Input Full-Scale (Fixed per Range): Default is the same as input range full-scale (+5V or +10V) and this cannot be changed. The voltage indicated corresponds to 100% of signal and a normalized count of +20000.

Scaled Full-Scale: Default is the same as full-scale (+5V or +10V), but you can rescale this value as required for your application.. Field is limited to a 32-bit number with up to 12 characters and a maximum of 4 decimal places. You must also Enable Floating Point Support to accomplish rescaling. If you are using only a portion of this range, you may have to interpolate your scaled full-scale.

Units: For reference, enter the units of measure for your rescaled zero and full-scale.

Integration/Totalization (Per Channel, Industrial Grade Models Only)

You can optionally integrate an input signal by totalizing its time-sliced instantaneous value (with integration/totalization enabled at any channel, the instantaneous inputs of this unit are sampled at a fixed rate of 8ms for all 8 channels, or 13ms with Input Averaging > 1).

Time Base (per Second, per Minute, per Hour, No Application): With integration/totalization enabled, the instantaneous input is sampled at a slower rate of every 8ms. You can optionally integrate this signal by totalizing its time sliced instantaneous value. In order for the totalized value to accurately accumulate, you need to specify the time-base units of the input signal to perform the integration over. Select "per Second", "per Minute", "per Hour", or "NA". You must specify a time base other than NA for totalization to occur. Note that if "NA" is selected and Totalize=Yes, then 0.0 is added to the totalized value. Likewise, disabling the totalizer on all channels can be used to raise the throughput from 125Hz to a rate between 200 and 1298Hz (see Table).

Totalize? & Preload Totalizer: Choose "Yes" for the Totalize? to totalize the input (this will also automatically enable floating point support). You can optionally choose to preload a totalized value on power-up or upon system reset by inserting a number in the Preload Totalizer field. In this way, you can choose that your post-power/reset preload value be taken from the Preload Totalizer field, or from the last totalizer value (before power-up or system reset). During operation, your incremental "time-sliced" measurement will be added to this total every 8ms. Note that in order to totalize an input, you MUST also Enable Floating Point Support by selecting "Yes" to that query.

At the End Count of 9999999 (Rollover or Latch?): When your totalized value reaches the limit of its field, you can click to select Roll Over and continue totalizing from zero, or restart from the Preload Value, whichever is selected. Optionally, you can latch the totalized value. Note that if the added value exceeds the amount required to reach the limit of 9,999,999.0, the additional amount it is over will be added to the count it rolls over (it assumes a free running counter and rolls over while ignoring the preload value).

Note (Counter Operation): This counter is limited to 7 digits of accuracy & resolution, starting with 4 places before and after the decimal point (see below). Then, as the count grows beyond the least 7 digits, the least significant digit is zeroed as the most significant digit is incremented. For example (note the transitions and digit shift left), the counter starts at 0000.0000 and increments to 0999.9999, then 9999.9990 to 99999.9900, then 999999.9000 to 9,999,999.0000, then it rolls over or latches as specified.

At Power-Up, Start Totalizer From (Preload or Last Value?): When you power-up, reset the unit, or reset the totalizer, you can direct the totalization to start from the Preload value in the Preload Totalizer field, or simply the last totalized value.

Note: A system reset always starts the totalizer from the preload value, or the last value, whichever is selected here. However, Reset Totalizer always restarts from the preload value, even if Last Value is selected here.

Channel Configuration Submit: Click this button to submit your channel configuration selections. Select another channel and repeat this process for each channel of this unit.

WEB BROWSER

Input Configuration

NOTE: If you are rescaling the input signal to a sub-range of the input, you will have to interpolate the scaled endpoints to align with the fixed input zero and full-scale endpoints indicated.

NOTE: The Totalizer Option is NOT available on commercial models.

IMPORTANT: Your effective resolution will decrease proportionally as you reduce the nominal signal span through rescaling.

WEB BROWSER

Input Configuration

Reset Totalizer: Click this button to reset the current channel's totalized value to the Preload Totalizer value.

Totalization Calculation Example

During totalization on this model, an instantaneous input sample is gathered every 8ms if no input averaging is being done (see table of page 40). If the instantaneous scaled input value indicates 500, units are gallons, and time base is set to "per Minute". Then $(500 \text{ gallons/minute}) \times (1 \text{ minute}/60 \text{ seconds})$ equals a flow rate of 8.33 gallons/per second. Since a new sample is obtained every 8ms, multiply 8.33gallons/second by 0.008seconds/sample to get an incremental increase in volume of 0.0667gallons/sample, and this amount is added to the totalized value. The maximum possible totalized value is 9,999,999.9999 (12 characters including decimal portion).

Input Averaging (Global, Not Per Channel)

You can optionally specify the number of input samples to average together to form your input response. Increasing this number will help to filter the measured response of noisy input signals, but will increase the update time (to 13ms from 8ms).

Input Averaging: Enter the number of input samples to average together from 0-500 samples. Selecting 0 is equivalent to selecting 1 and designates that no averaging will be performed. You may increase this number to help filter the measured response of noisy input signals.

Note: The Test Page does not display the averaged response.

Floating Point Configuration (Global, Not Per Channel)

Floating Point Control - Enable Floating Point Support (No or Yes)?:

This is normally set to "No" by default, but must be set to "Yes" if you are rescaling an input, or integrating/totalizing an input. Note that also selecting "Yes" to the Totalize query for any channel will automatically set this to "Yes", but if you later disable floating point, the totalizer will just add 0.0 to the totalized value. Disable IEEE Floating Point if you are not rescaling, integrating, or totalizing the input. Selecting "No" to disable floating point support will reduce the amount of calculations that have to be performed and gives the processor more time to do other tasks besides acquiring data and this is recommended when you are also not rescaling or integrating and totalizing the input. This can help to make critical control network applications more deterministic, particularly over networks with heavy traffic flow. Consider that input data is normally acquired every 5ms, or every 8ms (if totalization enabled on any/all channels), or every 13ms if input averaging is greater than 1. Twenty percent of this time is used to convert the data for all 8 channels, leaving only 80% to process all the other tasks required to store this data into Modbus registers, run the web server, and serve this data over the network. You can increase the time devoted to servicing these other tasks by disabling floating point, effectively increasing network determinism. So leave it off if you don't need to rescale or totalize. Note that even with floating point disabled, the measured input value will still indicate a floating point number, but the scaling and totalizing field will indicate "Inactive".

Floating Point Configuration...continued


Floating Point Control - Byte Order: Different Modbus systems will use different byte orders for the two 16-bit Modbus registers used to store a 32-bit floating point value. Select the byte order compatible with your system. Note that B0 refers to the Least Significant Byte, and B3 to the Most Significant Byte.

Floating Point Submit Button: Click here to execute your floating point control selections.

Reset Unit Control (System Reset, Not Per Channel)

Reset Button: Click this button to remotely perform a system reset of the unit. Note that resetting a unit will also restart any totalizer channels (either to a preload value or the last value).

After completing the username/password assignments, plus the network and input configuration parameters, click the Test Page button to access the web-server Test Page and operate your unit. Here you are able to read the input values, scaled values, scaled units, and totalized values of the eight differential input channels of this unit. You can even set an input polling rate for the active Test Page at the bottom.

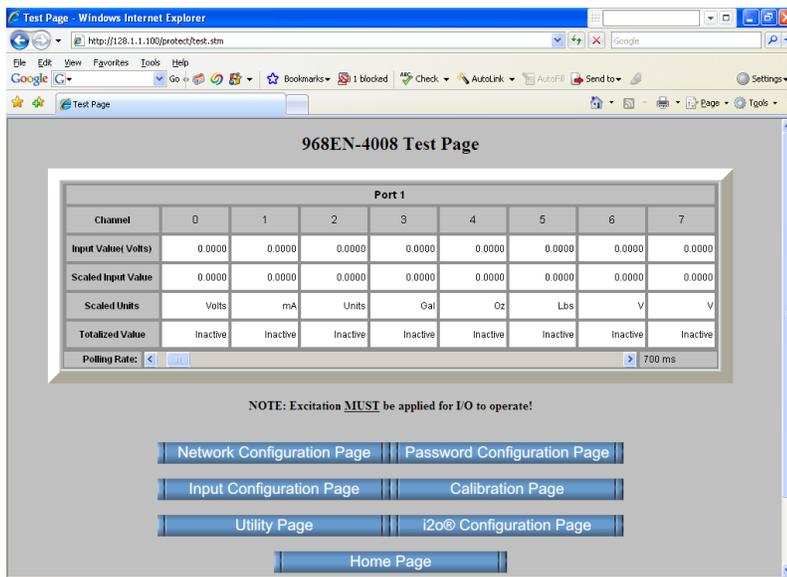

Voltage or Current Inputs: Note that the 8 input channels of these modules are grouped into one port. If the channel is not configured for floating point, which is necessary to accomplish scaling and totalizing, then "Inactive" will be indicated for the scaled input value, scaled units, and Totalized value.

Polling Rate: The input values update continuously at the Polling Rate set via this slide control. Click and drag this control to set the rate at which you wish to read the inputs via this web page. The rate is indicated just to the right of this control. Disable input polling by dragging it to the far right.

WEB BROWSER

Input Configuration

Test Page

When you first enter a page that includes controls like the polling rate slide of this page, you may note that your first click on the control is ignored. This is because the first click activates the control.


TIP: If you notice that the Input Test Page has stopped scanning I/O or appears to have halted, simply click the refresh button to restart the polling. This may happen if the unit is interrupted for a period of time and it causes the Java applet to time out and stop sending requests for data. Clicking your browser refresh button will restart the Java requests.

WEB BROWSER


Calibration Page

IMPORTANT: This module normally performs an automatic calibration of zero and full-scale. Recalibration on a channel-by-channel basis is normally NOT required, except for calibration that must be done to a higher standard. Do not attempt to recalibrate a channel unless absolutely required, or to verify the accuracy of internal calibration, as inadvertent mis-calibration will negatively affect the channel's performance.

Normally, this unit automatically re-calibrates its base A/D input range every time it scans its eight input channels by reading its own calibration reference voltage at the A/D channel. This reference has been precisely measured and its value stored inside the unit from the factory. This is sufficient to achieve rated accuracy using automatic calibration. The relative accuracy of calibration can be improved via software calibration facilitated with the controls of this page, or instead by issuing the appropriate Modbus register calibration commands. But if you need to calibrate to your own standard, or you want to check the accuracy of the internal calibration, then you can utilize the controls of this page to manually calibrate the inputs instead.

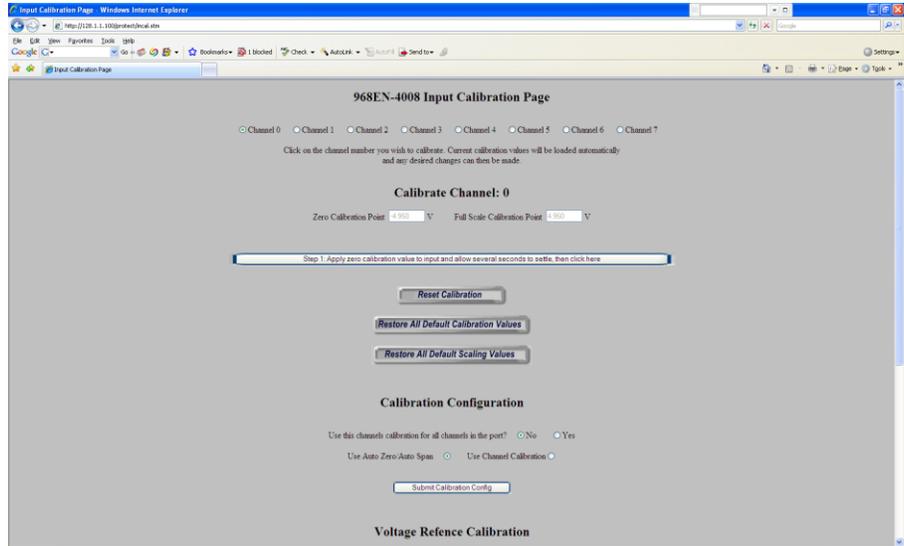

Use the scroll bars to the right to scroll down the page.

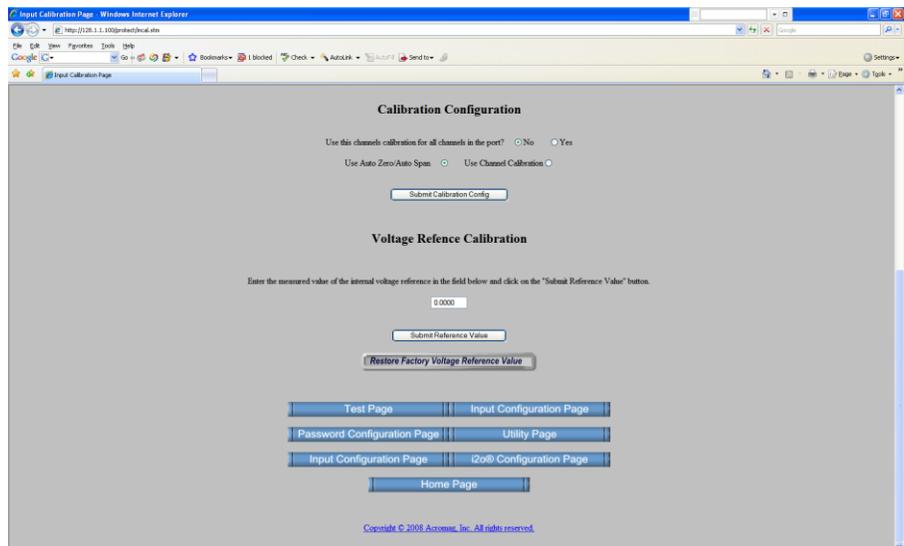

You have 3 options for accomplishing input calibration. The first option is to simply accept the default response of automatic input calibration. The second option will allow you to achieve better accuracy by manually calibrating one channel from the port, and using that channels response to represent all 8 channels of the port. This effectively calibrates the A/D channel that the port connects to and saves some time while improving accuracy. Your third option is to manually calibrate each input channel separately, using very accurate input signal and measurement equipment to achieve calibration. This would additionally compensate for the small errors contributed by the input filters, buffer amplifiers, and input multiplexers, as well as the initial inaccuracy of the input shunt resistor of current inputs. Which method you choose refers to your Calibration Configuration selected via controls on this page.

While the relative accuracy of calibration can be improved via software calibration facilitated with the controls of this page, or by instead issuing the appropriate Modbus register calibration commands, the Automatic calibration will be sufficient for most applications.

This page additionally allows the internal 5V calibration reference that is used to accomplish automatic calibration to be calibrated. An accurate voltage reference measurement is made between P1 header pins 1 and 2. The measured value representing the calibration voltage is recorded and stored inside FRAM memory that resides on the I/O board of the unit. The controls of this page allow a new value to be stored. This has already been done at the factory and should not need to be repeated unless miscalibration is suspected. In order to take this voltage measurement, it requires that the board assembly be carefully removed from the enclosure and this requires handling at an ESD-safe work station. **We do not recommend that you do this in the field as it invites potential damage to sensitive internal circuitry.**

The 16-bit A/D converter of this unit has a base range of $\pm 10V$. There is one port of eight differential channels that are separately multiplexed to this A/D channel. 967EN current models utilize the same $\pm 10V$ A/D range, but employ 200 Ω input shunt resistors to drive $\pm 4.0V$ to the A/D for $\pm 20mA$ input.

Once you have selected an input channel to calibrate, and then a calibration configuration, you simply follow the instructions printed on the Calibrate Channel bar as you click the bar, making sure that you apply the zero and full-scale calibration point signals indicated at the appropriate times.

Manual Input Calibration - Voltage or Current Inputs

These web controls allow you to perform manual calibration on an input channel. Manual calibration is accomplished on a per channel basis, or optionally on a per port basis by calibrating one channel from each port (i.e. each A/D channel).

To begin, at the top of the Input Calibration Page, first select the channel to be calibrated. Next select the Calibration Configuration for the channel before continuing.

WEB BROWSER

Calibration Page

For reference, one LSB of input signal is equivalent to the input full-scale voltage range divided by 65536 ($[Full-Scale - Zero]/65536$). In general, an uncalibrated A/D input can produce a zero offset error up to $\pm 28LSB$, and a full-scale error up to $\pm 0.4\%$. Each port will match their zeros to within $\pm 10LSB$ of each other, and their full-scale measurements to within $\pm 15LSB$.

WEB BROWSER

Calibration Page

Channel Selector Bullets: Click to bullet the channel you wish to calibrate. Calibration is done on a per channel basis. Optionally, you can pick one channel from the port, and use that calibration to represent all 8 port channels.

Zero Calibration Point Field: This field indicates the low calibration endpoint for the selected input range. This is the input signal that you have to apply to accomplish zero calibration. Your input source must be of an accuracy greater than 0.03% of span to achieve better results than auto-calibration.

Full Scale Calibration Point Field: This field indicates the high calibration endpoint for the selected input range and is the input signal to apply to accomplish full-scale calibration. Your input source must be of an accuracy greater than 0.03% of span to achieve better results than auto-calibration.

Calibration Step Button: You click this button in a sequence of three steps to accomplish input calibration via this web page. Specific instructions at each step appear printed on this button

Reset Calibration Button: Click this button if you make a mistake in the calibration sequence and wish to start over from step 1.

Restore All Default Calibration Values Button: Click this if you believe channel calibration has been done in error, or you are getting erratic results after recalibrating. This will affect all input channels at one time and the values restored are the ideal values, not the results of an actual calibration. You might choose this option if your calibration was done in error or produced unexpected results.

Restore All Default Scaling Values Button: Click this button if your own scaling produced unexpected results and you wish to return the input scaling values of the selected channel to their default values (typically the input range signal endpoints). Note that this will affect all input scaling values and will restore them to their ideal values.

Calibration Configuration

By default, zero and full-scale are calibrated automatically and this will be sufficient for most applications. You may optionally calibrate each channel separately to obtain the highest possible accuracy. Or to save time, you can calibrate one channel from the port (i.e. one A/D channel) and select an option to allow that channel's calibration to calibrate the response for all 8 channels of the port (A/D channel).

IMPORTANT: *If you select Yes to "Use this channel's calibration for all channels in the port?", note that the channel must be calibrated first, before making this selection.*

Use this channel's calibration for all channels of the port (Yes or No): If you select "Yes", then the manual calibration already done for this channel will apply to all eight port channels (the 8 channels are multiplexed to the same A/D channel). This selection should be done only after calibrating this channel. This saves additional time by only requiring one manual calibration per port. When done properly with very accurate signal sources and measurement equipment, this method of calibration is generally better than auto-calibration, but not as accurate as calibrating per channel, as calibrating each channel individually would additionally compensate for the small errors contributed by the input filters and input and input multiplexer.

Note: If calibrating one channel per port, the other channel's should have "Use Channel Calibration" selected. Selecting "yes" automatically selects "Use Channel Calibration" for the remaining port channels. You can still override this auto-selection, by subsequently selecting another option for any number of the other port channels.

Use Auto Zero/Auto Span Bullet: Clicking this bullet will use automatic calibration for the selected input channel (default behavior). With automatic calibration, the port utilizes the on-board $5V \pm 0.05\% \pm 5\text{ppm}/^\circ\text{C}$ reference source and ground to calibrate the input. Only the 0V and +5V range points are actually auto-calibrated, while calibration of -5V, and the $\pm 10V$ range endpoints (968EN) are coincident (interpolated). The internal calibration reference was precisely measured at the factory and its voltage value is stored in the unit. Steering circuitry prior to the port input buffers allows the A/D channel to connect to this reference voltage, and alternately to analog common (for zero). The unit utilizes the corresponding raw A/D output count for both zero and the reference voltage to calibrate the input by defining the equation of a straight line used to predict the input signal for any given A/D count. Only the 0V and +5V range points are actually auto-calibrated, while calibration of -5V, and the $\pm 10V$ range endpoints are coincident (interpolated). Automatic calibration will be sufficient for most applications. This method of calibrating the inputs is the most convenient and will achieve stated accuracy of $\pm 0.05\%$ for voltage inputs, and $\pm 0.1\%$ for current inputs. It is less accurate for current inputs because it does not compensate for the initial inaccuracy of the input current shunt resistor ($200\Omega \pm 0.05\% \pm 5\text{ppm}/^\circ\text{C}$).

Use Channel Calibration Bullet: Clicking this bullet will select manual (per-channel) calibration, which associates the current calibration with only the current channel. It is possible to achieve the greatest accuracy if you calibrate on a per channel basis and you have a precise input signal source and digital voltage meter with better than $\pm 0.05\%$ accuracy, but it takes more time to accomplish. Note that internally, 967EN models utilize a $\pm 10V$ 16-bit A/D range. On the 967EN, your calibration endpoints will remain $\pm 20\text{mA}$ even if you have selected a different input range.

Submit Calibration Configuration Button: Select your mode of calibration and click this button to write your selection to the unit. Then you can calibrate the channel as required, repeating it for each of the channels.

Voltage Reference Calibration

The on-board calibration reference used for automatic calibration can be separately calibrated by accurately measuring its value and entering it in the field provided in the Voltage Reference Calibration section of this page.

This has already been done at the factory and recalibration of this reference should not normally be required. You should not change the value indicated in this field unless authorized to do so, or performance may be negatively affected.

Voltage Reference Field (4.996 to 5.004): The internal calibration reference is precisely measured at the factory and its voltage value stored in the unit and indicated in this field. This reference voltage is $5V \pm 0.05\% \pm 5\text{ppm}/^\circ\text{C}$, and should read between 4.996 and 5.004 ($5V \pm 0.08\%$). This value is used to make a correspondence between the A/D response (digital count), and the voltage signal itself, in order to calibrate its linear response. You can enter your own measured value in this field if you need to recalibrate it (not recommended).

WEB BROWSER

Calibration Page

Reference Measurement:

This procedure is not normally required and has already been done at the factory. The reference voltage is measured between the pins of a header along the front edge of the circuit near the LED's (do not disassemble mated boards). You will have to remove the unit from its enclosure to measure this voltage. This should only be performed at a static-safe workstation by qualified personnel, or damage to the unit may result.

WEB BROWSER

Calibration Page

Note: The internal 5V reference voltage can be measured via a two-pin header along the front-edge of the top circuit board near the LED's. This calibration has already been done at the factory in an ambient temperature near 25°C and should not need to be repeated.

Submit Reference Value Button: Click this button after you have entered a measured reference voltage in the Voltage Reference field to store your measured value in non-volatile memory.

Restore Factor Voltage Reference Value Button: If you make a mistake and have entered the wrong value for the calibration reference, you can click this button to restore the original value measured from the factory. You would also click this button if you performed a system restore of the unit (see Troubleshooting – Getting Out of Trouble procedure).

A/D Input Calibration

The ideal A/D input voltages, raw counts, and normalized counts are indicated below (before re-scaling) for the range endpoints and midpoint, based on the 16-bit ±10V base input range of the A/D.

Zero & Full-Scale A/D Counts for A/D ranges & ±0.05% accuracy.

Full-Scale Range	Zero	0V/0mA	Full-Scale
±10V (968EN)	-10.000V+10mV	0V±10mV	+10.000V-10mV
Raw A/D Count	-32767+66	0±66LSB	+32768-66
Normalized Count	-20000+41	0±41	+20000-41
±5V (968EN)	-5.000V+5mV	0V±5mV	+5.000V-5mV
Raw A/D Count	-16384+33	0±33LSB	+16384-33
Normalized Count	-20000+36	0±36	+20000-36
±20mA (967EN)¹	-20mA±20uA	0mA±20uA	+20mA±20uA
Raw A/D Count	-13107±14	0±14LSB	+13107±14
Normalized Count	-20000±32	0±32	+20000±32

¹The 967EN utilizes the ±10V native range of the A/D to process ±20mA. A precision 200Ω input shunt resistor (±0.05%, ±10ppm/°C) is used to convert the input current to the A/D voltage. Thus, all 967EN input current ranges are actually sub-ranges of the 16-bit ±10V range. A full-scale current of 20mA will present a full-scale voltage of 4.0V to the A/D, yielding an effective internal resolution of one in 26214 parts for ±20mA (±13107parts), or one in 13107 parts for 0-20mA. For simplification, the raw A/D count for selected input ranges is normalized to a count of ±20000.

If you perform manual calibration via the controls of this page, or you use the Modbus register commands to calibrate the inputs (see below), then this has the added benefit of being able to correct for any negative full-scale offset, as auto calibration only utilizes 0V and +5V to calibrate the bipolar input.

For current inputs, manual calibration additionally compensates for the initial error of the input shunt resistor (up to ±0.05%).

IMPORTANT: Always allow the module to warm up a few minutes prior to calibration.

Method 1 – Channel Calibration Using the Built-In Browser Interface:

1. Bring up the browser interface and select the Input Calibration Page.
2. Allow the module to warm-up a few minutes before continuing.
3. Browse to the bottom of the Calibration Page and check that the reference field indicates a voltage between 4.996 and 5.003 ($5V \pm 0.08\%$). If you suspect this is inaccurate, this voltage will have to be precisely measured and input in this field first (this requires that unit be removed from its enclosure, see Optional Reference Calibration above).
4. For best results, Zero is always calibrated before full-scale. Note the Zero Calibration Point indicated in its field. You must apply this exact input signal to the input channel being calibrated to proceed. Your signal source should be accurate to better than $\pm 0.05\%$ (auto calibration standard).

967EN Units: The zero input signal is always -20mA. This is equivalent to delivering 20mA to the – terminal and returning it at the + terminal. This produces an A/D calibration voltage of -4.0V.

968EN Units: The zero input signal is a negative voltage of -9.95V or -5V, according to input range configuration. Note that if you do not have a precision negative voltage, just flip the differential positive and negative terminal connections and use a precision positive voltage.

After applying the Zero Calibration signal to the channel, simply click the “Step 1...” button to calibrate the zero.

If you make a mistake, you can always click the “Reset Calibration” button to start over from Calibrate Zero Step 1.

5. Note the Full-Scale Calibration Point indicated in its field. You must apply this exact input signal to the input channel being calibrated. Your signal source should be accurate to better than $\pm 0.05\%$ (auto calibration standard).

967EN Units: The full-scale calibration input signal is always +20mA. This is equivalent to delivering 20mA to the + terminal and returning it at the – terminal. This produces an A/D calibration voltage of +4.0V.

968EN Units: The full-scale input signal is a positive voltage of +9.95V or +5V, according to your input configuration.

After applying the correct Full-Scale Calibration signal to the channel, simply click the “Step 2...” button to calibrate the full-scale.

If you make a mistake, you can always click the “Reset Calibration” button to start over from Zero calibration Step 1.

The A/D $\pm 5V$ or $\pm 10V$ range is now calibrated for this channel. Note that the 967EN always uses $\pm 20mA$ into its 200Ω shunt to drive $\pm 4.0V$ to the $\pm 10V$ A/D input.

If your calibration configuration selected “No” for the query “Use this channel calibration for all channels of this port”, then you should repeat this procedure for the other channels. If “Yes” was selected for this query, then you do not need to repeat this procedure, as this calibration will be used to determine the response for the other port channels.

WEB BROWSER**Calibration Page**

If you are not satisfied with auto calibration, you can choose to use the web browser calibration page to achieve manual calibration (easier), or via direct Modbus register access as described in Method 2 of the following page.

WEB BROWSER

Calibration Page

Method 2 – Input Calibration via The Modbus TCP/IP Interface:

1. Write the appropriate Channel Configuration Register to select the input range to be calibrated for the input channel. 968EN units can select $\pm 5V$ or $\pm 10V$. 967EN models will always use the $\pm 20mA$ range to calibrate, even if you select one of the other ranges. This optimizes calibration by using as much of the A/D range as possible and it will drive $\pm 4.0V$ into the A/D which has a native 16-bit input range of $\pm 10V$. This step is effectively not required to calibrate the 967EN unit.
2. Write 24106 (5E2AH) into the Calibration Access Register to remove write protection from the calibration registers.
3. For best results, Zero is always calibrated before full-scale. You must apply the exact input zero signal to the input channel being calibrated to proceed. Your signal source should be accurate to better than $\pm 0.05\%$ (auto calibration standard).

967EN Units: The zero input signal is always -20mA. This is equivalent to delivering 20mA to the – terminal and returning it at the + terminal. This produces an A/D calibration voltage of -4.0V.

968EN Units: The zero input signal is a negative voltage of -9.95V or -5V, according to input range configuration. Note that if you do not have a precision negative voltage, just flip the differential positive and negative terminal connections and use a positive reference voltage.

4. Write a 16-bit word into the correct Zero Cal Trigger Register with a set bit in the bit position that corresponds to the channel you wish to calibrate zero at. You would write to the Zero Cal Trigger register to address channels 0-7. A set bit in these registers will trigger the unit to sample the corresponding channel, capture its zero signal, and store the count. The unit will replace calibration coefficients immediately, with no reset required.
5. You must apply the exact input full-scale signal to the input channel being calibrated. Your signal source should be accurate to better than $\pm 0.05\%$ (auto calibration standard).

967EN Units: The full-scale calibration input signal is always +20mA. This is equivalent to delivering 20mA to the + terminal and returning it at the – terminal. This produces an A/D calibration voltage of +4.0V.

968EN Units: The full-scale input signal is a positive voltage of +9.95V or +5V, according to your input configuration.


6. Write a 16-bit word into the correct Span Cal Trigger Register with a set bit in the bit position that corresponds to the channel you wish to calibrate full-scale at. You would write to the Span Cal Trigger register to address channels 0-7. A set bit in these registers will trigger the unit to sample the corresponding channel, capture the full-scale signal, and store the digital count. The unit will replace calibration coefficients immediately, with no reset required.
7. Repeat these steps for the other input channels to be calibrated.
8. When finished calibrating, write 0x0000 to the Calibration Access Register to replace write protection for the calibration registers and to help prevent potential miscalibration.

You may also access a Utility Page that includes a couple of built-in utilities that allows you to verify input operation without actually wiring to the inputs (self-test control), and allow you to export your configuration to an identical unit (export configuration control). You can select the Utility Page button from the Test Page screen to display a screen similar to that shown here:


WEB BROWSER

Utility Page

When you first enter a page that includes controls like this, you may note that your first click on a control is ignored. This is because the first click only activates the control.

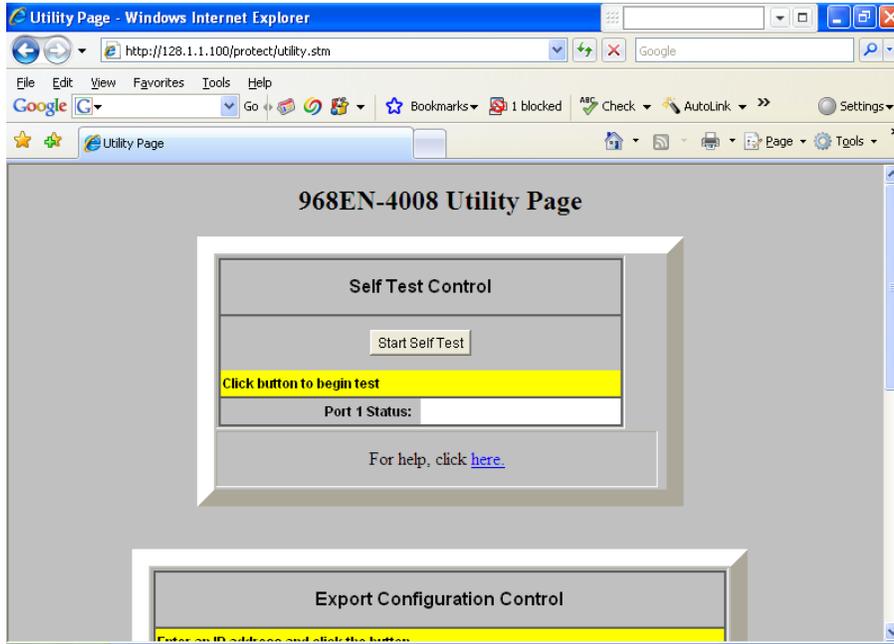

Use the scroll bar on the right to continue scrolling down the page as shown below:

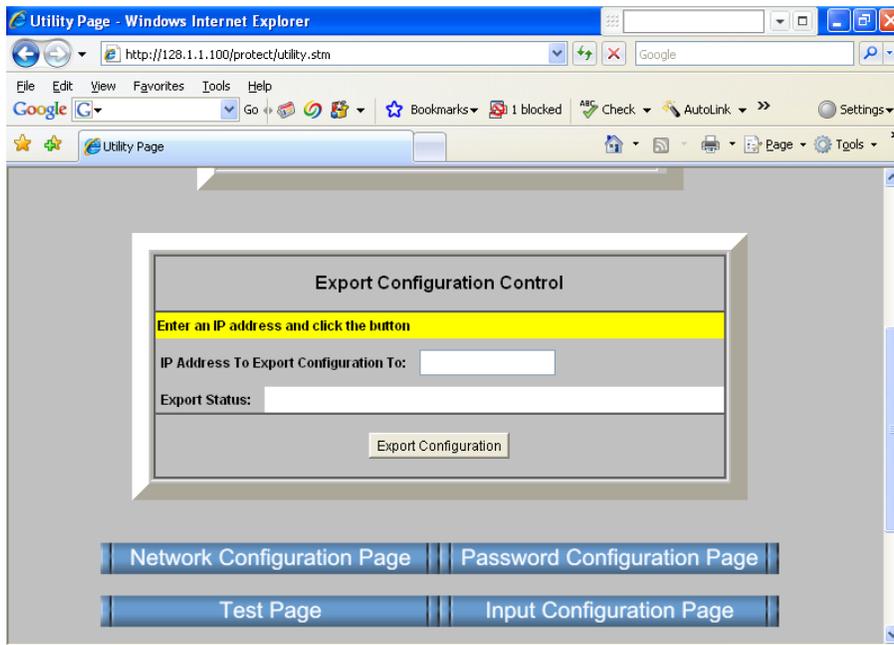

WEB BROWSER

Utility Page

Connecting field input signals during self-test will not harm the unit, as the input port multiplexer is disabled during self-test and no signal contention is possible.

Input Self Test Control

The Self-Test makes use of built-in calibration reference signals to check the operation of input ports and reference. If the Span and Zero values are within the allowable specs, the unit will display "PASS". If the Span or the Zero is out of specification, the unit will display "FAIL". This can serve as a trouble-shooting aide if you are experiencing problems. It does not require that you connect anything to the input, and doing so will not affect the results of this test. Likewise, you do not have to disconnect your input signals to run this test.

Each channel is internally multiplexed to a pair of input buffers that drive a 16-bit $\pm 10V$ A/D channel. The Self Test Control will test the relative accuracy of the input ports by sampling the reference signals. Simply click the "Start Self Test" to begin testing. This triggers the unit to momentarily connect each A/D input channel's buffers (each port channel) to the internal reference signals (0V and 5V) and measure the response. If the resultant measurement is within an acceptable level of error with respect to rated accuracy, then the Port status will indicate "Passed". Note that this effectively tests the signal path of each channel as it tests the circuit operation beginning from the output side of the input port's 8:1 input multiplexer. Thus, the Self-Test does not test operation of the port input multiplexer, or the integrity of the input filters, as the reference signal is switched to the input buffers of the four A/D channels, after the input multiplexer.

Export Configuration Control

Enter the IP address of the destination unit you are trying to replicate this configuration at. This unit must be already connected to the network. Refer to Network Connections for examples of how to network connect units.

The export function is a real time-saver when commissioning multiple units in similar fashion. Simply enter the IP address of the unit you wish to send your I/O configuration to (it is assumed that you have already communicated with it and setup its network parameters). Click the Export Configuration button to transmit your I/O configuration.

With reference to the Modbus Memory Map for this device, this function sends the contents of all Holding Registers (4xxxx registers), right up to the wink register, to the IP address indicated. It does not send network configuration parameters which must be preset via the web browser. Likewise, it does not transfer scaled values, scaled units, preload values, nor any floating point information, or any items not represented in a register. The Export Status window will let you know if the configuration was received correctly at the remote station (destination stations may still require their own calibration).

Note: Unit will only export its configuration to identical model numbers. An industrial 968EN-4008 cannot export to a commercial version 968EN-4C08.

POSSIBLE CAUSE	POSSIBLE FIX
Green RUN LED Does Not Light...	
Bad connections.	Recheck Power Connections
Try a system reset.	Cycle the power to the unit.
Internal +3.3V power has failed or a fatal processor (firmware) error has occurred.	Return unit for repair.
Input Power TVS has failed. This could occur for a sustained voltage surge or continuous over-voltage at the power terminals.	Return unit for repair. Power should be fused externally or current-limited to a safe operating level no less than twice the maximum input current.
Continuous Flashing Green RUN LED...	
A network link has not been established.	A normal unit will flash the green RUN LED and maintain a solid STATUS LED at startup until a link has been established. Check your cable and switch/hub connections. Once a link is established, the green Run LED should not continue to blink but remain ON. If it continues to blink, then the firmware may be in error.
Unit in "wink" mode.	Read Status register to verify "wink" status. Write 5555H to Wink Toggle Register to toggle wink mode off/on.
Unit failed to boot firmware.	A continuously flashing green Run LED can signify the unit has failed to initialize and may require repair if you are sure you have a good network connection and proper power voltage.
Cannot Communicate...	
Power ON to the unit?	Check if green RUN LED is ON?
Fiber Connections not crossed over.	The auto-crossing feature does not apply to the fiber port. These connections must physically cross transmit to receive and visa-versa.
Cannot Communicate...	
Wrong IP Address	Change IP address of unit or host PC so they match domains. Try the default unit address of 128.1.1.100.
Many Communication Errors...	
Is cable segment longer than 100M?	Distance between two Ethernet nodes is limited to 100 meters with approved cable.
Correct Cable?	Shielded CAT-5/5E cable or equivalent is recommended.
Missing earth ground connection.	Connect earth ground to TB3 GND terminal adjacent to power terminal.
Cannot Browse Unit...	
Your browser may be setup to use a proxy server for LAN communications.	Temporarily disable the use of a proxy server by your browser (see procedure of next page).

TROUBLE-SHOOTING

Diagnostics Table

Upon power-up, after blinking momentarily the green "Run" LED should remain ON. This indicates the unit is properly powered and operating normally. If RUN continues to blink, then the unit may not be connected to the network or the cable is bad. Otherwise, a continuous blinking RUN LED can indicate unit is in "wink" ID mode, or it may be indicative of a firmware initialization error.

TROUBLE-SHOOTING

Diagnostics Table

If your problem still exists after checking your wiring and reviewing this information, or if other evidence points to another problem with the unit, an effective and convenient fault diagnosis method is to exchange the unit with a known good unit. Acromag's Application Engineers can provide further technical assistance if required. Complete repair services are also available from Acromag.

POSSIBLE CAUSE	POSSIBLE FIX
<i>Cannot Access Web Pages (Unit Won't Accept Username & Password)...</i>	
Have you forgotten your username and password settings?	Return the unit to the Default Mode and use the default username and password to access the Password Configuration Page to reset them to something you can remember.
<i>Communication To Unit is Lost...</i>	
Was communication interrupted by severe interference or shock?	Reset the unit by cycling power.
<i>Unit Fails to Start-up or Initialize...</i>	
Input power voltage below 18V?	Check your power supply voltage and make sure that it is at least 18V and of sufficient capacity (select a current capacity at least 2x the maximum current draw of the unit).
<i>Adding another unit to network slows web page interaction considerably...</i>	
Does each unit have a unique MAC address? <i>All units are normally shipped with a unique MAC address assigned from the factory. An error in shipment could release a unit with a default MAC address (52:4F:42:45:52:54).</i>	Go to the Network Configuration Page and verify that each unit has a unique MAC address installed (should always be true). If you have 2 units with same MAC address, this will slow down communications considerably and you must contact the factory for MAC reassignment.
<i>Inputs Appear Noisy or Unstable...</i>	
Have you grounded your inputs? Note that un-grounded inputs and the Port Common terminal both require an earth-ground connection.	Connect the Port Common (C) terminal to earth ground. If input source is not already grounded, then try connecting the IN- lead to the port C terminal (which separately must also be connected to earth ground).
Have you tried Input Averaging?	You can use controls on the input configuration page to set the number of samples to average inputs over. Try increasing this number above 1 to minimize noise (up to 500).
<i>Input Polarity is Wrong...</i>	
Are your input terminals reversed?	Observe proper polarity for voltage inputs. Current can be input to the input (+) or input (-) terminals if a non-polarized range is selected.
<i>Unit Fails Input Self Test...</i>	
Internal calibration reference has failed or has been miscalibrated.	Check the reference field of the Calibration Page and make sure a voltage between 4.9965 and 5.0035 (5V±0.07%) is indicated. If not, you may attempt to calibrate this yourself, or return the unit to Acromag for calibration, repair, or replacement.
<i>Current Inputs Have Greater Inaccuracy...</i>	
Auto calibration of current inputs fails to compensate for errors in the current shunt resistor.	Refer to Input Cal Page and perform a manual cal of the input if auto calibration results are not sufficient.

Refer to Acromag Application Note 8500-734 for help in setting up network communication with your unit (see CDROM shipped with unit or down-load it from www.acromag.com). This document gives details for changing your PC's TCP/IP configuration in order to communicate with hardware similar to your unit (see TCP/IP Properties of Network Configuration in Windows). If you have carefully followed this procedure and you still cannot browse your unit, you may have the web browser of your laptop or PC setup to use a proxy server when browsing the web. If you are using Internet Explorer, refer to the "Tools" pull-down menu, select "Internet options...", click the "Connections" tab, then click the "LAN Settings" button. Locate the Proxy server information and uncheck the box next to the statement "Use a proxy server for your LAN". Then click [OK] to return to the "Connections" screen, and click [OK] again to save your settings. You should now be able to use Internet Explorer to browse the unit as required. However, to later restore your PC's connection to your company network, you may have to re-enable the use of a proxy server for your LAN.

There is limited built-in error checking to prevent you from writing invalid values to a configuration register. If you inadvertently write an invalid value to an internal register, operation may become unpredictable under certain conditions. If resetting the unit fails to restore order, then to regain control of the unit, the unit can either be re-downloaded at the factory, or you can try restoring its initial configuration by following this procedure:

Procedure For Restoring any 967/8EN Unit to its Initial Configuration
(Also used if you wish to sanitize the unit and return it to original state)

IMPORTANT: Before attempting Restore, please follow the default mode activation procedure located on page 3. Then, if you are still unable to communicate with your module, you can utilize this procedure to try restoring its firmware configuration.

WARNING: Use this only as a last resort, as this procedure will reset everything to its default state--all holding registers, and network settings (the permanently coded MAC ID does not change).

1. With unit power OFF, depress and hold the front-panel DFT push-button.
2. With DFT depressed, apply power.
3. Note that the green RUN LED will turn ON. Continue to hold the push-button depressed for about 5 seconds until the green RUN LED turns OFF. Release the DFT push-button at this point and the RUN LED will blink for 1-20 seconds as the unit acquires its address, then remain ON for normal operation (normal boot). At this point, the unit is not in the default communication mode, but all registers are reset back to their default factory state.
4. If the green RUN LED never turned OFF while you held the DFT push-button during power-up, then reinitializing the unit has failed and you should try it again. This time, make sure that the DFT push-button switch is completely depressed and held until RUN turns OFF while powering the unit.

If you do use restore and want to return the unit to service, you will also have to separately restore the calibration reference.

TROUBLE-SHOOTING

Trouble Browsing Your Unit?

Getting Out Of Trouble



So, your unit has apparently "gone wild", and power cycling the unit did not correct your problem, then follow this procedure to restore it to its initial configuration and regain control.

KEY FEATURES

TECHNICAL REFERENCE


- **Safety Agency Approvals**– CE (all models) UL, & cUL listed, plus Class I; Division 2; Groups A, B, C, D approval (967EN-4008 and 968EN-4008 *ONLY*).
- **True Differential Wide-Band Input** path is fully differential right through to the A/D converter for improved noise rejection.
- **Web-Browser Reconfiguration** allows a standard web-browser to be used to configure, control, monitor, and calibrate over Ethernet.
- **Fully Isolated** input channels (as a group), network ports, and power circuits for safety and increased noise immunity.
- **Wideband Inputs** can be processed in as fast as 5ms (200Hz) for all 8 channels.
- **16-bit A/D Converter** for high-accuracy and high-resolution.
- **Built-In Calibration Source** facilitates precise automatic calibration and self-test.
- **Integration and Totalization of Inputs is Possible** via scaling registers and non-volatile memory storage (*Industrial Models Only*).
- **Optional User-Scaling** allows inputs to rescale to user-defined sub-ranges or other engineering units to facilitate integration/totalization.
- **Selectable Modbus TCP/IP or UDP/IP Protocol Support** for up to 5 sockets using Modbus TCP/IP.
- **Flexible IP Addressing** supports static, or DHCP.
- **10Base-T and 100Base-TX Support** with auto-negotiated 10/100Mbps, Half or Full Duplex.
- **Rugged Network Ports** are safety-isolated from each other and transient protected for ESD, EFT, and other transients.
- **Auto MDI/MDI-X Crossover** requires no special up/down link port or crossover cables to connect this device to your PC, or an external Ethernet switch, or hub.
- **Nonvolatile Reprogrammable Memory** allows the functionality of this device to be reliably reprogrammed thousands of times.
- **Operating & Diagnostic LED's Aide Troubleshooting** with two LED's to indicate power, operating mode, wink status, plus two communication LED's for port activity and link status
- **Internal Watchdog** timer is built into the microcontroller that causes it to initiate a self reset if the controller "locks up" or fails to return from an operation in a timely manner.
- **Convenient "Wink" ID Mode** will blink the green RUN LED as a tool to help identify specific remote units.
- **Wide Ambient Operation** from -40°C to +70°C (Industrial models).
- **Hardened For Harsh Environments** and protection from RFI, EMI, ESD, EFT, & surges. Has low radiated emissions per CE requirements.
- **"Plug-In" Terminal Blocks** make wiring removal, & replacement easy.
- **Enclosure Has Integrated DIN-Rail Mount** for "T" type DIN rail.
- **Wide-Range DC-Power** is diode-coupled for use with redundant supplies, and/or battery back-up.

This circuit employs one pair of fault-tolerant 8:1 analog multiplexers (each lead) to differentially drive one group of 8 channels (port) of current or voltage inputs, to the differential channel of a 16-bit A/D converter. Additional circuitry can optionally connect each A/D input to 0V (zero), or a precision 5V reference to help accomplish calibration and self-test. The A/D has a native input range of $\pm 10V$. 967EN models utilize the $\pm 10V$ range (a 200 Ω shunt resistor converts input current to A/D voltage to drive $\pm 4V$ for $\pm 20mA$ input). Units include an isolated 10/100Mbps Ethernet interface for configuration, monitoring, calibration, and control of the I/O. Embedded configuration parameters are stored in non-volatile memory.

HOW IT WORKS

The A/D rescales the inputs via a resistor divider network utilizing a series 25K Ω resistor and a 17K Ω divider resistor, additionally coupled to an internal 4.096V A/D reference via a series 10K Ω resistor. The rescaled signals alternately connect to the ADC. The ADC uses a successive approximation algorithm and internal sample & hold circuit to convert the input signal to a 16-bit serial output stream which is transmitted to the CPU via an SPI interface.

The I/O terminals and the Ethernet port terminals also include transient suppression. Embedded configuration parameters are stored in non-volatile memory. A wide-input, high-efficiency, switching regulator (isolated flyback converter) provides isolated power to the unit. Refer to the simplified schematic on the following page to help gain a better understanding of circuit operation.

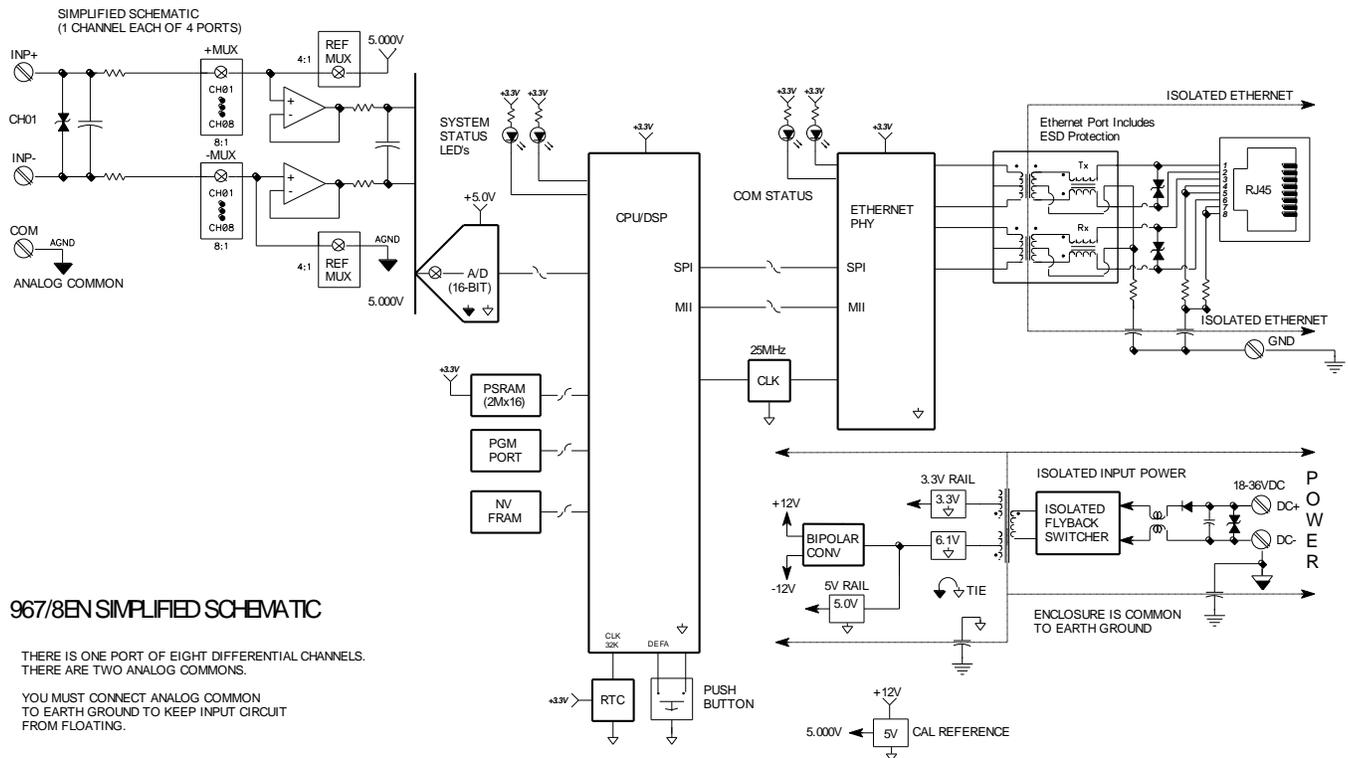

MODBUS REGISTERS

The "x" following the leading character represents a four-digit address location in user data memory.

The leading character is generally implied by the function code and omitted from the address specifier for a given function. The leading character also identifies the I/O data type.

Modbus registers are organized into reference types identified by the leading number of the reference address:

Reference	Description
0xxxx	<u>Read/Write Discrete Outputs or Coils</u> . A 0x reference address is used to drive output data to a digital output channel.
1xxxx	<u>Read Discrete Inputs</u> . The ON/OFF status of a 1x reference address is controlled by the corresponding digital input channel.
3xxxx	<u>Read Input Registers</u> . A 3x reference register contains a 16-bit number received from an external source—e.g. an analog signal.
4xxxx	<u>Read/Write Output or Holding Registers</u> . A 4x register is used to store 16-bits of numerical data (binary or decimal), or to send the data from the CPU to an output channel.

Note: The ON/OFF state of discrete inputs and outputs is represented by a 1 or 0 value assigned to an individual bit in a 16-bit data word (port). This is sixteen 0x or 1x references per data word. With respect to mapping, the lsb of the word maps to the lowest numbered channel of a port and channel numbers increase sequentially as you move towards the msb.

All I/O values are accessed via the 16-bit Input Registers or 16-bit Holding Registers given in the Register Map. Input registers contain information that is read-only. For example, the current input value read from a channel, or the states of a group of digital inputs. Holding registers contain read/write information that may be configuration data or output data. For example, the high limit value of an alarm function operating at an input, or an output value for an output channel.

Register Functions

Each 967/8EN unit has a default factory configuration as noted in the Specifications section. Your application will likely differ from the default configuration provided and the unit will need to be reconfigured. You may reconfigure most features of this unit by issuing the appropriate Modbus functions to Register Map registers, as required by your application. You may also use a standard web browser to access the built-in web pages of the unit to perform basic I/O & reconfiguration.

Below is a subset of standard Modbus functions that are supported by this unit along with the reference register address group that the function operates on. Use these functions to access these registers as outlined in the Register Map for sending and retrieving data.

The following standard Modbus functions operate on register map registers to monitor, configure, and control unit I/O:

CODE	FUNCTION	REFERENCE
01 (01H)	Read Coil (Output) Status	0xxxx
02 (02H)	Read Input Status	1xxxx
03 (03H)	Read Holding Registers	4xxxx
04 (04H)	Read Input Registers	3xxxx
05 (05H)	Force Single Coil (Output)	0xxxx
06 (06H)	Preset Single Register	4xxxx
15 (0FH)	Force Multiple Coils (Outputs)	0xxxx
16 (10H)	Preset Multiple Registers	4xxxx
17 (11H)	Report Slave ID (See Below)	Hidden

MODBUS REGISTERS

Register Functions

If an unsupported function code is sent to a unit, exception code 01 (Illegal Function) will be returned in the response. If a holding register is written with an invalid value, exception code 03 (Illegal Data Value) will be returned in the response message. You may refer to the Modbus specification for a complete list of possible error codes.

967/8EN-4016 Report Slave ID Example Response¹

FIELD	DESCRIPTION
Unit ID	Echo Unit ID Sent In Query
Function Code	11
Byte Count	43
Slave ID (Model No.) ¹	13=967EN-4008
Run Indicator Status	FFH (ON)
Firmware Number String (Additional Data Field) ¹	41 43 52 4F 4D 41 47 2C 39 33 30 30 2D 31 36 31 41 2C 39 36 37 45 4E 2D 34 30 30 38 ("ACROMAG,9300-161A,967EN-4008,serial number&rev,six-byteMACID")

¹**Note:** Model 967EN-4008 uses slave ID "13" and firmware number: 9300-161. Model 967EN-4C08 uses slave ID "14" and firmware number: 9300-162 Model 968EN-4008 uses slave ID "15" and firmware number: 9300-163, Model 968EN-4C08 uses slave ID "16" and firmware number: 9300-164 (The firmware model numbers are also indicated on the home page of the web browser).

For detailed information on Modbus, feel free to download our technical reference 8500-648, "Introduction To Modbus", at www.acromag.com. You can also find more information specific to Modbus TCP/IP by downloading whitepaper 8500-765, "Introduction To Modbus TCP/IP". Additional information regarding Ethernet can also be found in our whitepaper 8500-747, "Introduction To Ethernet/IP".

For your convenience, the 967/8EN mirrors the contents/operation of registers 0xxxx, 1xxxx, & 3xxxx (as applicable) into holding register space for systems and controllers that cannot directly access registers 0xxxx, 1xxxx, & 3xxxx.

All Modbus registers can be written to, or read from, using either the standard methods described in the Modbus specification, or through mapping (mirroring) to the Holding Registers. The registers are mapped as follows and specifics follow the mapping:

Register Mirroring

MODBUS REGISTERS

0xxxx Coil Registers are mapped to 42xxx Holding Registers
 1xxxx Input Status Registers are mapped to 41xxx Holding Registers
 3xxxx Input Registers are mapped to 43xxx Holding Registers

Register Mirroring

For 3xxxx Input Registers, the format of the registers is identical and you only need to offset your address by 43000. For example: if you want to read Input Register 1 through the Holding Registers, you would use the "Read Holding Registers" function with an address of 43001.

For the 1xxxx Input Status Registers, the return data is reformatted to match the Holding Register format. For example: if you request the Input Status for 16 digital inputs, instead of getting 2 bytes returned with the 16 bits representing the 16 digital inputs, you will get 16 separate words, each set to either 0000H (OFF), or FFFFH (ON).

For the 0xxxx Coil Registers, reads are handled in the same way as the 1xxxx Input Status Registers. You can also write to the coil registers by using the "Preset Single Register" function with an address offset of 42000. Setting the data to 0000H will turn the coil OFF, while setting the data to FF00H will turn the coil ON. Writing to multiple coils is not supported via register mirroring, you must use the "Write Multiple Coils" function for that.

Data Types

I/O values for 967/8EN units are represented by the following simple data types for temperature, percentage, and discrete on/off.

Summary Of Data Types Used By 9xxEN Models

Data Types	Description
Discrete	A discrete value is generally indicated by a single bit of a 16-bit word. The bit number/position typically corresponds to the discrete channel number for this model. Unless otherwise defined for outputs, a 1 bit means the corresponding output is closed or ON, a 0 bit means the output is open or OFF. For inputs, a value of 1 means the input is ON (Active low near 0V), while a value of 0 specifies the input is OFF or in its high state (usually >> 0V).
Normalized Data Count(This Model)	A 16-bit signed integer value is used to represent ± 20000 counts for bipolar input ranges and 0-20000 counts for unipolar input ranges. For example, -1V, 0V and +1V are represented by integer values -20000, 0, and 20000 for bipolar devices, respectively.
Temperature	A 16-bit signed integer value with resolution of $0.1 \pm C/lsb$ represents the range of a TC type measured in degrees C. For example, a JTC type has a range of -210 to 760C, which read -2100 to 7600 counts within the data register respectively.

The following table outlines the register map for the 967/968EN I/O processor. The Modbus functions operate on these registers using the data types noted above (except for the Reset Slave and Report Slave ID functions).

Not all programmable features of this device will include a corresponding Modbus configuration register. Some functionality must be programmed via the built-in web browser interface. For example, parameters related to network communications do not have a Modbus register and are programmed solely through the built-in web interface.

Register Map

Model 967EN-4x08
Model 968EN-4x08

Ref	Addr.	Description	Data Type/Format
Input Registers (3x References, Read-Only)			
30001	0000	Unit Status <i>Use this register to check status of wink mode, default mode, or watchdog timeout.</i>	<i>Data Format:</i> 16-bit Unsigned Integer Bit 15: NV Memory Fault 1 = Non-Volatile Memory failed initialization Bit 14: Wink Mode Flag 1 = Wink (Blinks Run LED for ID) (See Wink Unit Register) Bit 13: Default Mode Flag 1 = Default Mode Indication Bits 12-0: 0 (Not Used)
30002	0001	CH 00 Status <i>(Over/Under-range, Input Range)</i>	Bit 15-4: 0 (Not Used) Bit 3: Over-Range Flag Bit 2: Under-Range Flag b1 b0 967EN 968EN 0 0 ±20mA ±5V DC 0 1 0-20mA ±10 VDC 1 0 4-20mA (Not Used) 1 1 (Not Used) (Not Used)
30003	0002	CH 01 Status	<i>See CH0 explanation, apply to CH 1.</i>
30004	0003	CH 02 Status	<i>See CH0 explanation, apply to CH 2.</i>
30005	0004	CH 03 Status	<i>See CH0 explanation, apply to CH 3.</i>
30006	0005	CH 04 Status	<i>See CH0 explanation, apply to CH 4.</i>
30007	0006	CH 05 Status	<i>See CH0 explanation, apply to CH 5.</i>
30008	0007	CH 06 Status	<i>See CH0 explanation, apply to CH 6.</i>
30009	0008	CH 07 Status	<i>See CH0 explanation, apply to CH 7.</i>
30010	0009	Reserved	Reserved – Do Not Use
.	.	.	.
.	.	.	.
30017	0010	Reserved	Reserved – Do Not Use
Normalized Channel Data Registers			
30018	0011	CH 00 Data	16-bit Signed Integer Data
30019	0012	CH 01 Data	16-bit Signed Integer Data
30020	0013	CH 02 Data	16-bit Signed Integer Data
30021	0014	CH 03 Data	16-bit Signed Integer Data
30022	0015	CH 04 Data	16-bit Signed Integer Data
30023	0016	CH 05 Data	16-bit Signed Integer Data
30024	0017	CH 06 Data	16-bit Signed Integer Data
30025	0018	CH 07 Data	16-bit Signed Integer Data

The 16-bit Signed Integer Data stored here refers to the input range A/D count, but after normalizing it to ±20000 for ±100% of the selected input range (or 0-20000 for 0-100% of unipolar ranges).

Register Map

Model 967EN-4x08

Model 968EN-4x08

Ref	Addr.	Description	Data Type/Format
Input Registers (3x References, Read-Only)			
30026	0019	Reserved	Reserved – Do Not Use
.	.	.	.
.	.	.	.
30033	0020	Reserved	Reserved – Do Not Use
Scaled Channel Low /High Data Words, 32-bit IEEE-754 Floating Point			
30034	0021	CH 00 Data LO	IEEE-754 Floating Point LO Bytes
30035	0022	CH 00 Data HI	IEEE-754 Floating Point HI Bytes
30036	0023	CH 01 Data LO	IEEE-754 Floating Point LO Bytes
30037	0024	CH 01 Data HI	IEEE-754 Floating Point HI Bytes
30038	0025	CH 02 Data LO	IEEE-754 Floating Point LO Bytes
30039	0026	CH 02 Data HI	IEEE-754 Floating Point HI Bytes
30040	0027	CH 03 Data LO	IEEE-754 Floating Point LO Bytes
30041	0028	CH 03 Data HI	IEEE-754 Floating Point HI Bytes
30042	0029	CH 04 Data LO	IEEE-754 Floating Point LO Bytes
30043	002A	CH 04 Data HI	IEEE-754 Floating Point HI Bytes
30044	002B	CH 05 Data LO	IEEE-754 Floating Point LO Bytes
30045	002C	CH 05 Data HI	IEEE-754 Floating Point HI Bytes
30046	002D	CH 06 Data LO	IEEE-754 Floating Point LO Bytes
30047	002E	CH 06 Data HI	IEEE-754 Floating Point HI Bytes
30048	002F	CH 07 Data LO	IEEE-754 Floating Point LO Bytes
30049	0030	CH 07 Data HI	IEEE-754 Floating Point HI Bytes
30050	0031	Reserved	Reserved – Do Not Use
.	.	.	.
.	.	.	.
30065	0040	Reserved	Reserved – Do Not Use
Totalized Chan Low/High Data Words, 32-bit IEEE-754 Floating Point			
30066	0041	CH 00 Data LO	IEEE-754 Floating Point LO Bytes
30067	0042	CH 00 Data HI	IEEE-754 Floating Point HI Bytes
30068	0043	CH 01 Data LO	IEEE-754 Floating Point LO Bytes
30069	0044	CH 01 Data HI	IEEE-754 Floating Point HI Bytes
30070	0045	CH 02 Data LO	IEEE-754 Floating Point LO Bytes
30071	0046	CH 02 Data HI	IEEE-754 Floating Point HI Bytes
30072	0047	CH 03 Data LO	IEEE-754 Floating Point LO Bytes
30073	0048	CH 03 Data HI	IEEE-754 Floating Point HI Bytes
30074	0049	CH 04 Data LO	IEEE-754 Floating Point LO Bytes
30075	004A	CH 04 Data HI	IEEE-754 Floating Point HI Bytes
30076	004B	CH 05 Data LO	IEEE-754 Floating Point LO Bytes
30077	004C	CH 05 Data HI	IEEE-754 Floating Point HI Bytes
30078	004D	CH 06 Data LO	IEEE-754 Floating Point LO Bytes
30079	004E	CH 06 Data HI	IEEE-754 Floating Point HI Bytes
30080	004F	CH 07 Data LO	IEEE-754 Floating Point LO Bytes
30081	0050	CH 07 Data HI	IEEE-754 Floating Point HI Bytes
30082	0051	Reserved	Reserved – Do Not Use
.	.	.	.
.	.	.	.
30097	0060	Reserved	Reserved – Do Not Use

Note: Totalized Channel Registers are NOT available on commercial models.

You **MUST** enable floating point in order to scale, integrate, and totalize. Turn it off if you do not need to rescale, integrate, or totalize inputs, as it will help to increase network determinism.

Ref	Addr.	Description	Data Type/Format																																													
Holding Registers (4x References, Read/Write)																																																
<i>Channel Configuration Registers 40001-40008</i>																																																
40001	0 (0000)	Channel 00 Configuration (Default is 0019H, see shading) Note: Before setting bit 12, be sure to first calibrate the channel before using its calibration to also calibrate its entire port.	<table border="0"> <tr> <td>Bit 15:</td> <td>0 (Not Used)</td> </tr> <tr> <td>Bit 14:</td> <td>0=Calibration use AZ/AS 1=Use Manual Calibration</td> </tr> <tr> <td>Bit 13:</td> <td>0 (Not Used)</td> </tr> <tr> <td>Bit 12:</td> <td>0=Do NOT use this CH Calibration for this port. 1=Use this CH Cal for Calibrating this port.</td> </tr> <tr> <td>(see Note)</td> <td></td> </tr> <tr> <td>Bit 11:</td> <td>0 (Not Used)</td> </tr> <tr> <td>Bit 10:</td> <td>0 (Not Used)</td> </tr> <tr> <td>Bit 9:</td> <td>0 (Not Used)</td> </tr> <tr> <td>Bit 8:</td> <td>Totalizer Initial Value* 0=Use Preload Value 1=Use Last Value</td> </tr> <tr> <td>Bit 7:</td> <td>Totalizer End Count* 0=Rollover 1=Latch</td> </tr> <tr> <td>Bit 6:</td> <td>Totalizer OFF/ON* 0=OFF 1=ON</td> </tr> <tr> <td>Bit 5:</td> <td>0 (Not Used)</td> </tr> <tr> <td>Bits 4,3:</td> <td>Totalizer Time Base* 00 Per Second (Commercial - Default = Not Used) 01 Per Minute 10 Per Hour 11 No Action (Industrial - Default)</td> </tr> <tr> <td>Bit 2:</td> <td>0 (Not Used)</td> </tr> <tr> <td>Bits 1,0:</td> <td>Input Range Selection. <table border="0"> <tr> <td></td> <td><u>967EN</u></td> <td><u>968EN</u></td> </tr> <tr> <td>00</td> <td>0=±20mA</td> <td>0=±5V</td> </tr> <tr> <td>01</td> <td>1=0-20mA</td> <td>1=±10V</td> </tr> <tr> <td>10</td> <td>2=4-20mA</td> <td>Reserved</td> </tr> <tr> <td>11</td> <td>Reserved</td> <td>Reserved</td> </tr> </table> </td> </tr> </table>	Bit 15:	0 (Not Used)	Bit 14:	0=Calibration use AZ/AS 1=Use Manual Calibration	Bit 13:	0 (Not Used)	Bit 12:	0=Do NOT use this CH Calibration for this port. 1=Use this CH Cal for Calibrating this port.	(see Note)		Bit 11:	0 (Not Used)	Bit 10:	0 (Not Used)	Bit 9:	0 (Not Used)	Bit 8:	Totalizer Initial Value* 0=Use Preload Value 1=Use Last Value	Bit 7:	Totalizer End Count* 0=Rollover 1=Latch	Bit 6:	Totalizer OFF/ON* 0=OFF 1=ON	Bit 5:	0 (Not Used)	Bits 4,3:	Totalizer Time Base* 00 Per Second (Commercial - Default = Not Used) 01 Per Minute 10 Per Hour 11 No Action (Industrial - Default)	Bit 2:	0 (Not Used)	Bits 1,0:	Input Range Selection. <table border="0"> <tr> <td></td> <td><u>967EN</u></td> <td><u>968EN</u></td> </tr> <tr> <td>00</td> <td>0=±20mA</td> <td>0=±5V</td> </tr> <tr> <td>01</td> <td>1=0-20mA</td> <td>1=±10V</td> </tr> <tr> <td>10</td> <td>2=4-20mA</td> <td>Reserved</td> </tr> <tr> <td>11</td> <td>Reserved</td> <td>Reserved</td> </tr> </table>		<u>967EN</u>	<u>968EN</u>	00	0=±20mA	0=±5V	01	1=0-20mA	1=±10V	10	2=4-20mA	Reserved	11	Reserved	Reserved
Bit 15:	0 (Not Used)																																															
Bit 14:	0=Calibration use AZ/AS 1=Use Manual Calibration																																															
Bit 13:	0 (Not Used)																																															
Bit 12:	0=Do NOT use this CH Calibration for this port. 1=Use this CH Cal for Calibrating this port.																																															
(see Note)																																																
Bit 11:	0 (Not Used)																																															
Bit 10:	0 (Not Used)																																															
Bit 9:	0 (Not Used)																																															
Bit 8:	Totalizer Initial Value* 0=Use Preload Value 1=Use Last Value																																															
Bit 7:	Totalizer End Count* 0=Rollover 1=Latch																																															
Bit 6:	Totalizer OFF/ON* 0=OFF 1=ON																																															
Bit 5:	0 (Not Used)																																															
Bits 4,3:	Totalizer Time Base* 00 Per Second (Commercial - Default = Not Used) 01 Per Minute 10 Per Hour 11 No Action (Industrial - Default)																																															
Bit 2:	0 (Not Used)																																															
Bits 1,0:	Input Range Selection. <table border="0"> <tr> <td></td> <td><u>967EN</u></td> <td><u>968EN</u></td> </tr> <tr> <td>00</td> <td>0=±20mA</td> <td>0=±5V</td> </tr> <tr> <td>01</td> <td>1=0-20mA</td> <td>1=±10V</td> </tr> <tr> <td>10</td> <td>2=4-20mA</td> <td>Reserved</td> </tr> <tr> <td>11</td> <td>Reserved</td> <td>Reserved</td> </tr> </table>		<u>967EN</u>	<u>968EN</u>	00	0=±20mA	0=±5V	01	1=0-20mA	1=±10V	10	2=4-20mA	Reserved	11	Reserved	Reserved																																
	<u>967EN</u>	<u>968EN</u>																																														
00	0=±20mA	0=±5V																																														
01	1=0-20mA	1=±10V																																														
10	2=4-20mA	Reserved																																														
11	Reserved	Reserved																																														
40002	0001	CH01 Config	See explanation for channel 00 above.																																													
40003	0002	CH02 Config	See explanation for channel 00 above.																																													
40004	0003	CH03 Config	See explanation for channel 00 above.																																													
40005	0004	CH04 Config	See explanation for channel 00 above.																																													
40006	(0005)	CH05 Config	See explanation for channel 00 above.																																													
40007	(0006)	CH06 Config	See explanation for channel 00 above.																																													
40008	(0007)	CH07 Config	See explanation for channel 00 above.																																													
40009	(0008)	Reserved	Reserved – Do Not Use																																													
.	.	.	.																																													
.	.	.	.																																													
40016	(000F)	Reserved	Reserved – Do Not Use																																													

Register Map

Model 967EN-4x08 Model 968EN-4x08

Totalized inputs are sampled every 8ms (or 13ms with Input Averaging). Your input signal per time base is thus multiplied by 8ms per sample to get your incremental increase or decrease of volume that is added to your totalized value. The maximum totalized value possible is 9,999,999.9999.

Note: Totalizer Options are NOT available on commercial models.

Note: You must separately enable floating point if you enable the totalizer here (see Floating Point Enable register).

IMPORTANT: If you set bit 12 to use this channel's calibration for the entire port, note that the channel must already be manually calibrated for this to work properly.

*Note: Totalizer option is not available on commercial models.

Register Map

Model 967EN-4x08
Model 968EN-4x08

Ref	Addr.	Description	Data Type/Format
Holding Registers (4x References, Read/Write)			
<i>Miscellaneous Unit Configuration Registers 40017-40021</i>			
40017	(0010)	Input Averaging <i>(Def = 0000H, No Averaging)</i>	Set to 0 or 1 for No Averaging. Set to an integer greater than 1 to specify the number of samples to average (500 samples maximum).
40018	(0011)	Global Floating Point Enable and Byte Order <i>(Def = 0000H, disabled)</i>	Bit 15: Floating Point ON/OFF 0=OFF 1=ON Bits 14..2 0 (Not Used) Bits 1,0: Data Word Byte Order 00 b3 b2 b1 b0 01 b0 b1 b2 b3 10 b1 b0 b3 b2 11 b2 b3 b0 b1
40019	(0012)	<i>Reserved</i>	<i>Reserved – Do Not Use</i>
40020	(0013)	<i>Reserved</i>	<i>Reserved – Do Not Use</i>
40021	(0014)	Wink Toggle & Cal Access & Restore Cal & Rest Scaling & System Reset Register	Write 21845 (5555H) here to cause the unit to “wink” its green Run LED in order to ID the unit. Write the same value a second time to stop “winking”. Use the Unit Status Register wink mode flag to determine the wink state. Write 24106 (5E2AH) to remove write protection from the calibration registers that follow. All other values apply write-protection to the calibration registers. Write 44718 (AEAEH) to restore the default calibration coefficients. Write 60138 (EAEAH) to restore the default scaling values. Write 41429 (A1D5H) to this register to cause a system reset and reboot.
40022	(0015)	<i>Reserved</i>	<i>Reserved – Do Not Use</i>
40023	(0016)	<i>Reserved</i>	<i>Reserved – Do Not Use</i>
40024	(0017)	<i>Reserved</i>	<i>Reserved – Do Not Use</i>
<i>Channel Calibration Value Registers 40025-40056</i>			
40025	(0018)	CH0 ±5V Cal HI	16-bit Signed Integer Data
40026	(0019)	CH0 ±5V Cal LO	16-bit Signed Integer Data
40027	(001A)	CH0 ±10V Cal HI	16-bit Signed Integer Data
40028	(001B)	CH0 ±10V Cal LO	16-bit Signed Integer Data
40029	(001C)	CH1 ±5V Cal HI	16-bit Signed Integer Data
40030	(001D)	CH1 ±5V Cal LO	16-bit Signed Integer Data
40031	(001E)	CH1 ±10V Cal HI	16-bit Signed Integer Data
40032	(001F)	CH1 ±10V Cal LO	16-bit Signed Integer Data
40033	(0020)	CH2 ±5V Cal HI	16-bit Signed Integer Data
40034	(0021)	CH2 ±5V Cal LO	16-bit Signed Integer Data
40035	(0022)	CH02 ±10V Cal HI	16-bit Signed Integer Data
40036	(0023)	CH02 ±10V Cal LO	16-bit Signed Integer Data

Shaded registers from 40025 to 40056 are write-restricted and reserved for internal firmware and factory use (these registers are modified indirectly by the calibration registers 40112-40113). Do not attempt to directly modify the contents of these registers.

Ref	Addr.	Description	Data Type/Format
Holding Registers (4x References, Read/Write)			
<i>Channel Calibration Value Registers 40025-40056</i>			
40037	(0024)	CH3 $\pm 5V$ Cal HI	16-bit Signed Integer Data
40038	(0025)	CH3 $\pm 5V$ Cal LO	16-bit Signed Integer Data
40039	(0026)	CH3 $\pm 10V$ Cal HI	16-bit Signed Integer Data
40040	(0027)	CH3 $\pm 10V$ Cal LO	16-bit Signed Integer Data
40041	(0028)	CH4 $\pm 5V$ Cal HI	16-bit Signed Integer Data
40042	(0029)	CH4 $\pm 5V$ Cal LO	16-bit Signed Integer Data
40043	(002A)	CH4 $\pm 10V$ Cal HI	16-bit Signed Integer Data
40044	(002B)	CH4 $\pm 10V$ Cal LO	16-bit Signed Integer Data
40045	(002C)	CH5 $\pm 5V$ Cal HI	16-bit Signed Integer Data
40046	(002D)	CH5 $\pm 5V$ Cal LO	16-bit Signed Integer Data
40047	(002E)	CH5 $\pm 10V$ Cal HI	16-bit Signed Integer Data
40048	(002F)	CH5 $\pm 10V$ Cal LO	16-bit Signed Integer Data
40049	(0030)	CH6 $\pm 5V$ Cal HI	16-bit Signed Integer Data
40050	(0031)	CH6 $\pm 5V$ Cal LO	16-bit Signed Integer Data
40051	(0032)	CH6 $\pm 10V$ Cal HI	16-bit Signed Integer Data
40052	(0033)	CH6 $\pm 10V$ Cal LO	16-bit Signed Integer Data
40053	(0034)	CH7 $\pm 5V$ Cal HI	16-bit Signed Integer Data
40054	(0035)	CH7 $\pm 5V$ Cal LO	16-bit Signed Integer Data
40055	(0036)	CH7 $\pm 10V$ Cal HI	16-bit Signed Integer Data
40056	(0037)	CH7 $\pm 10V$ Cal LO	16-bit Signed Integer Data
40057	(0038)	<i>Reserved</i>	<i>Reserved – Do Not Use</i>
.	.	.	.
.	.	.	.
40109	(006C)	<i>Reserved</i>	<i>Reserved – Do Not Use</i>
40110	(006D)	Reset Totalizer Trigger for Channels 7-0 <i>Register always reads back as 0000H</i>	Bits 15-8: Not used. Bits 7-0: 1=Reset Totalizer 0=No Action Bit position corresponds to input channel to reset totalizer at (lsb is lowest numbered channel).
40111	(006E)	<i>Reserved</i>	<i>Reserved – Do Not Use</i>
<i>Calibration Trigger Registers 40112-40113</i>			
40112	(006F)	Zero Cal Trigger for Channels 7-0	Bit position corresponds to channel number. Write a set bit to this register to trigger the A/D to sample the corresponding input(s) and store the zero signal (lsb is lowest numbered channel of group). <i>First write 24106 to Calibration Access Register 40037 to remove write-protection from the calibration value registers before triggering.</i>

Register Map

Model 967EN-4x08 Model 968EN-4x08

Shaded registers from 40025 to 40056 are write-restricted and reserved for internal firmware and factory use (these registers are modified indirectly by the calibration registers 40112-40113). Do not attempt to directly modify the contents of these registers.

Register Map

Model 967EN-4x08
Model 968EN-4x08

Ref	Addr.	Description	Data Type/Format
Holding Registers (4x References, Read/Write)			
<i>Calibration Trigger Registers 40112-40113</i>			
40113	(0070)	Span Cal Trigger Channels (Ch 7-0)	Bit position corresponds to channel number. Write a set bit to this register to trigger the A/D to sample the corresponding input(s) and store the positive calibration signal (lsb is lowest numbered channel of this group). <i>First write 24106 to Calibration Access Register 40037 to remove write-protection from the calibration value registers.</i>
41001 . . .		This block Mirrors 1xxxx Registers.	<i>Refer to Register Mirroring. 1xxxx Input Status Registers are mapped to the 41xxx Holding Register space using an address offset of 41000.</i>
42001 . . .		This block Mirrors 0xxxx Registers.	<i>Refer to Register Mirroring. 0xxxx Coil Registers are mapped to the 42xxx Holding Register space using an address offset of 42000.</i>
43001 . . .		This block Mirrors 3xxxx Registers.	<i>Refer to Register Mirroring. 3xxxx Input Registers are mapped to the 43xxx Holding Register space using an address offset of 43000.</i>

Notes (Register Map):

1. The 16-bit A/D range uses an A/D count of ± 32768 counts for its native $\pm 10V$ input range. To simplify, all input ranges are subsequently normalized to a count of ± 20000 by the unit and this corresponds to $\pm 100\%$, or 0-20000 corresponding to 0-100%.
2. 967EN Models have a fixed A/D range of $\pm 10V$, but use a 200 Ω input shunt to drive $\pm 4.0V$ to the A/D representing $\pm 20mA$ input. Bipolar current ranges are normalized to ± 20000 by the unit corresponding to $\pm 100\%$. Unipolar current ranges are normalized to 0-20000 for 0-100%.

Default Register Settings

Here is a summary of the 967EN/968EN default register settings and corresponding default behavior.

967EN/968EN Default Register Settings

REGISTER	HEX	ACTION
Channel Configuration Registers	0019H	Use Auto-Zero/Span Cal
		Do not use CH Cal for Port
		Totalizer to use Preload
		Totalizer is OFF
		Totalizer Action is Rollover
		Totalizer Time Base is NA
		Input is $\pm 20mA$ or $\pm 10V$
Digital Filter/Input Averaging	0000H	0, No Input Averaging
Floating Point Enable & Byte Order	0000H	Disable, b3-b2-b1-b0 Order
Wink Register	0000H	OFF, Do Not Wink

Not all parameters of this device can be set via Modbus registers. In general, parameters related to I/O will have a Modbus register, while those related to network communication must be set via the web interface. Here is a list of configuration parameters which do not have a Modbus register.

- Username & Password
- Static IP Address
- Number of Modbus Sockets
- Subnet Mask
- Gateway Address
- Host Name
- Select Static, DHCP, or DHCP w/Fallback Addressing
- Wink On/Off
- Self-Test Utility
- Export Configuration & Export IP Address
- i2o Function

Configuration Parameters Not Programmable Via Modbus Registers

Use the built-in web interface screens to set these parameters, which are generally required to setup communications.

A DIN-rail mount, industrial Ethernet I/O system providing 8 fully differential input channels for current (967EN), or voltage (968EN). Units have an isolated 10/100M Ethernet interface for monitoring, calibration, and control via Modbus TCP/IP. Unit is DC-powered with reverse polarity protection. Field inputs are wide-band, multi-ranging, and fully differential. Sixteen bit A/D conversion is used and input ranges may be rescaled to sub-ranges or other engineering units to help facilitate integration/totalization. Input channels include transient protection. Input channels (as a group), network ports, and power circuits are isolated from each other, and from earth ground. Non-volatile reprogrammable memory in the unit stores configuration, calibration, and totalization data.

SPECIFICATIONS

The BusWorks model prefix "900" denotes the Series 900 network I/O family. The "EN" suffix denotes EtherNet. The four digit suffix of this model number represents the following options, respectively: "4" = Modbus; "0" = Industrial Model or "C" = Commercial Model, "08" = 8 Channels.

Model Numbers

- 967EN-4008
- 967EN-4C08
- 968EN-4008
- 968EN-4C08

Differences between Industrial and Commercial Models

	Industrial Models	Commercial Models
Operating Temp	-40°C to 70°C	0°C to 55°C
Accuracy	0.05% (Typ 967EN & 968EN)	0.1% (967EN & 968EN)
Approvals	CE, UL, cUL	CE only
Totalizer	Yes	Not Available

Eight differential input channels organized as one port of input current (967EN), or input voltage (968EN). The eight-channel port is differentially 8:1 multiplexed to a 16-bit A/D channel. Model 967EN input channels use precision 200Ω shunt resistors to convert input current to voltage, such that ±20mA will drive ±4.0V full-scale to the ±10V input channel of a 16-bit A/D. 968EN input channels drive the ±10V A/D directly. Inputs are wideband (up to 200Hz) and include transient voltage suppression. Model 968EN voltage inputs are also fault-tolerant to ±25V.

Analog Inputs

*Current (967EN Model)
or
Voltage (968EN Model)*

Unit must be wired and configured for the intended input type and range (see Connections section for details). Inputs are bipolar differential and the signal can be input to either terminal and returned on the opposite terminal. The following paragraphs summarize this model's input types, ranges, and applicable specifications.

SPECIFICATIONS

Analog Inputs

Current (967EN Model)
or
Voltage (968EN Model)

DC Input Range: $\pm 10V$ or $\pm 5V$ (968EN); $\pm 20mA$, 0-20mA, 4-20mA (967EN). A nominal, bipolar, and differential field range of $\pm 10V$ is used on a per channel basis which corresponds to the full 16-bit A/D input range. An Input sub-range of $\pm 5V$ may be selected for the 968EN (15-bit). Note that the 968EN $\pm 10V$ range may not be able to achieve the full-scale endpoints exactly. 967EN units also utilize the $\pm 10V$ A/D range, but with 200 Ω precision shunt resistors (0.125W) at the inputs to convert input current to voltage, such that $\pm 20mA$ DC ($\pm 22mA$ Max) drives $\pm 4V$ full-scale to the A/D. 967EN input sub-ranges of 0-20mA, and 4-20mA may also be selected. Inputs may optionally be rescaled to support sub-ranges of nominal ranges, or to accomplish integration and totalization of the input signal. All selectable input ranges are normalized to ± 20000 for $\pm 100\%$ of range, or 0-20000 for 0-100% of range (over-range is 2000 or 2500 for 4-20mA range). Positive current or voltage is delivered to the (+) input terminal and returned on the negative (-) input terminal.

Input Resolution: 305.176 μV /bit ($\pm 10V$ and $\pm 5V$), or 1.5259 μA /bit (967EN). The internal 16-bit A/D resolution is ± 32768 parts for $\pm 10V$ range, and ± 13107 (14.6 bits) for $\pm 20mA$ (as this drives only $\pm 4V$ full-scale to the $\pm 5V$ 16-bit A/D input channel). All input ranges are normalized to ± 20000 counts, or 0-20000 counts by the firmware. Your effective resolution will vary with your range selection and input scaling.

Normalized Resolution for 968EN Input Ranges

RANGE	$\pm 10V$	$\pm 5V$
Raw A/D	± 32768 (16 bit)	± 16384 (15 bit)
Resolution	305.176 μV /bit	305.176 μV /bit
PPM	15.26ppm	15.26ppm
Normalized	± 20000 (15.2 bit)	± 20000 (15 bit)

Normalized Resolution for 967EN Input Ranges¹

RANGE	$\pm 20mA$	0-20mA	4-20mA
Raw A/D	± 13107 bits (14.6 bits)	0-13107bits (14.6 bits)	2621-13107bits (14.3 bits)
Resolution	1.5259 μA /bit	1.5259 μA /bit	1.5259 μA /bit
PPM	38.15ppm	76.30ppm	95.36ppm
Normalized	± 20000 (14.6 bits)	0-20000 (14.6 bits)	0-20000 (14.3 bits)

¹Input uses a 200 Ω shunt and the $\pm 10V$ (16-bit) A/D Range. Input ranges are normalized to ± 20000 for $\pm 100\%$, and 0-20000 for 0-100%.

Limits to Re-Scaling Nominal Ranges: To achieve a minimum acceptable resolution of 12 bits (± 2048 parts), rescaling should not divide the nominal A/D base range of $\pm 10V$ by more than 16 (0.0625x). 967EN input voltage equals input current x200 Ω and the $\pm 10V$ A/D range is used. A peak reading occurs at a normalized count of 22500 (112.5%) with full-scale corresponding to 20000 counts (100%).

RANGE	$\pm 10V$ (968EN)	$\pm 5V$ (968EN)	967EN (uses $\pm 10V$)
MIN SPAN	1.25V or $\pm 0.625V$	1.25V or $\pm 0.625V$	6.25mA or $\pm 3.125mA$

Input Reference Test Conditions: $\pm 20mA$ (967EN) or $\pm 10V$ (968EN) input; ambient temperature = 25 $^{\circ}C$; 24VDC supply.

Input Over Voltage Protection: Bipolar Transient Voltage Suppressors (TVS), clamp level less than 50V and greater than 18V.

Input Impedance: 4M Ω minimum (968EN), 200 Ω (967EN).

Voltage Input Reference Test Conditions: ± 10 V DC input; ambient temperature = 25°C; 24VDC supply.

Input Over voltage Protection: Bipolar Transient Voltage Suppressors (TVS), clamp level less than 50V.

Input Calibration: By default, the unit automatically calibrates zero and span every input cycle using precise on-board calibration reference signals sufficient for most applications. Optionally, inputs may be calibrated manually by driving the input channel externally. It is also possible to manually calibrate an entire input port based on the calibration of one channel from that port (a manual calibration time saver). Calibration is automatic, manual per channel or port, and a unit can mix manual and automatic calibration among channels.

Input Accuracy: 967EN-4008: $\pm 0.05\%$ Typ., better than $\pm 0.1\%$ of span.
 967EN-4C08: Better than $\pm 0.1\%$ of span.
 968EN-4008: Better than $\pm 0.05\%$ of span.
 968EN-4C08: Better than $\pm 0.1\%$ of span.

The above specs use auto-calibration, for nominal input ranges and reference test conditions. This includes the effects of repeatability, terminal point conformity, and linearization, but does not include sensor error. Note – relative accuracy can be improved with manual calibration.

Input Measurement Temperature Drift: Better than ± 25 ppm/°C ($\pm 0.0025\%/^{\circ}\text{C}$).

Input Analog to Digital Converter (A/D): A 16-bit successive-approximation converter, Linear Technology LTC1856IG.

Input Conversion Rate: Varies according to the number of scan groups enabled and whether totalization is being performed.

Input Filter: Normal mode filtering fixed per input type.

Input Filter Bandwidth: -3dB at 150KHz, typical. Bandwidth is dominantly restricted to the update rate of 8 channels.

Input Noise Rejection (Common Mode): Better than -72dB @ 60Hz, typical with 200 Ω input unbalance.

Input Cable Length: I/O port interface cables should not exceed 30m in length for rated performance.

Floating Point Enable/Disable: You must enable Floating Point support in order to rescale an input signal, or to accomplish integration/totalization. Disable it if you don't need to rescale or totalize. Disabling floating point support reduces the amount of calculations that have to be performed and gives the processor more time to do other tasks besides acquiring data. This can help to make critical control network applications more deterministic, particularly over networks with heavy traffic flow.

Byte Order: The unit allows you to specify the byte order for 32-bit floating point values. Different Modbus systems will use different byte orders for the two 16-bit registers used to store a 32-bit floating point value. Select the byte order compatible with your system. Note that B0 refers to the Least Significant Byte and B3 to the Most Significant Byte.

I2o Timing:

Update Time: $\pm 4.0\%$ Typical @ 500mS per channel¹

Note – accuracy can be improved by setting longer update times.

Percent of Span: Average Input to Output response = 28.1mS²

1. Test was taken with eight 972/3EN-4006 Units connected through two switches and one hub. All eight i2o channels were enabled using timed updates only. Input Averaging was disabled.

2. Test Unit (968EN-4008) was directly connected to the Ethernet port of a 973EN-4006. Only one i2o Channel was used for the test only using percent of span. Input Averaging was disabled.

SPECIFICATIONS

Analog Inputs

*Current (967EN Model)
 or
 Voltage (968EN Model)*

SPECIFICATIONS

Analog Inputs

Input Integration/Totalization (Industrial Units Only): If totalization is enabled, the instantaneous input is sampled at a slower rate of every 8ms and you can integrate this signal by totalizing its time sliced instantaneous value. To totalize, you must separately enable Floating Point Support and you also need to scale the input appropriately and specify the time-base perform the integration over ("per Second", "per Minute", "per Hour", or "NA"). You must specify a time base other than NA for totalization to occur. Note that if "NA" is selected and Totalize=Yes, then 0.0 is added to the totalized value. The totalized value is non-volatile and you can preload a totalized value on power-up, or system reset. By default, it totalizes from the last totalizer value before interrupting power or performing a system reset. During run time, your incremental "time-sliced" measurement value will be added to this total every 8ms. The software also gives the capability to reset the current totalized value to zero. For example, during totalization, we gather an instantaneous input sample every 8ms. If your instantaneous scaled input value indicates 500, and units are gallons, and the time base is set to "per Minute". Then $(500 \text{ gallons/minute}) \times (1 \text{ minute}/60 \text{ seconds})$ equals a flow rate of 8.33 gallons/per second. Since a new sample is obtained every 8ms, multiply 8.33gallons/second by 0.008seconds/sample to get an incremental increase of volume of 0.0666 gallons/sample, and this amount is added to your totalized value. Note that with floating point disabled, the measured input value will still indicate a floating point number, but the scaling and totalizing fields will indicate "Inactive".

Memory

This unit contains both volatile and non-volatile memory. It does not contain any fixed or removable disk or tape drives, or memory cards. For security or sanitization considerations, review the following:

Flash Memory (Non-Volatile): 512 Kilobyte flash memory is used for storage register data, communication configuration parameters, and web-page information and is user-modified via reconfiguration. It is sanitized via the Restore procedure by holding the default switch while powering up the unit until the green Run LED turns OFF. At this time, the memory reverts to the factory default settings, except for the MAC ID and serial number which are fixed. Refer to "Getting Out of Trouble" section in this manual for more information.

FRAM (Non-Volatile): This 8 Kilobyte memory is resident on the I/O board and is used to store the channel configuration, calibration coefficients, and scaling information for the inputs. It is user-modified via channel setup and calibration. Its contents can be cleared to factory default calibration values by clicking the Restore All Default Calibration Values button of the Input Calibration web page.

SRAM (Volatile): This 96 kilobyte memory is integrated within the central processor and is used as scratchpad memory by the processor during run time. Its contents are cleared at power-down.

PSRAM (Volatile): This 4 Megabyte memory is external to the central processor and used as the run time memory for high-speed execution of this unit's internal program. Its contents are cleared on power-down.

Dimensions: 1.05 inches wide, 4.68 inches tall, 4.35 inches deep. Refer to the dimensions drawing at the front of this manual.

Network Connector: 8-pin RJ-45 socket with metal shield (shield is isolated and bypassed to earth ground at the GND terminal with an isolation capacitor and TVS). Connections are wired MDI, but unit is auto-crossing. Use CAT-5 cable minimum to connect module to a PC.

RJ-45	Signal (MDI)	Description
1	Tx+	Transmit Positive
2	Tx-	Transmit Negative
3	Rx+	Receive Positive
4	Not Used	Connects to Pin 5
5	Not Used	Connects to Pin 4
6	Rx-	Receive Negative
7	Not Used	Connects to Pin 8
8	Not Used	Connects to Pin 7

DIN Rail Mount: Type EN50022; "T" rail (35mm).

I/O Connectors: Removable plug-in type terminal blocks rated for 15A/300V; AWG #12-24 stranded or solid copper wire.

Case Material: Self-extinguishing NYLON type 6.6 polyamide thermoplastic UL94 V-2, color beige; general purpose NEMA Type 1 enclosure.

Printed Circuit Boards: Military grade FR-4 epoxy glass.

Shipping Weight: 1 pound (0.45 Kg) packed.

Safety Approvals: CE marked (EMC Directive 2004/108/EC), UL Listed (UL508-17th Edition, ANSI/ISA 12.12.01-2007), cUL Listed (Canada Standard C22.2, Nos. 142-M1987 & 213-M1987), Hazardous Locations: Class I; Division 2; Groups A, B, C, D.

Safety Approvals (967EN-4C08 and 968EN-4C08): CE marked (EMC Directive 2004/108/EC)

ATEX Certified: Assessment by TUV Rheinland of North of America, Inc. per

ATEX Directive 94/9/EC.

Ex nA IIC T4 Gc

TUVNA 14 EX 0001X

x = Special Conditions

1) "WARNING-EXPLOSION HAZARD-DO NOT MAKE OR BREAK CONNECTIONS IN HAZARDOUS LOCATIONS OR AREAS"

"Warning: Must be installed in suitable enclosure with an Ingress Protection of IP54 minimum, in Hazardous Locations or Areas"

Operating Temp (Industrial Grade): -40°C to +70°C (-40°F to +149°F).

Operating Temp (Commercial Grade): 0°C to +55°C (+32°F to +131°F).

Storage Temp (Industrial Grade): -40°C to +85°C (-40°F to +185°F).

Storage Temp (Commercial Grade): 0°C to +70°C (+32°F to +158°F).

Relative Humidity: 5 to 95%, non-condensing.

Power Requirements: 18-36V DC SELV (Safety Extra Low Voltage), 1.944W maximum. Observe proper polarity. Keep DC power cables less than 10m in length. Divide power by your voltage to approximate maximum current and select a supply that can deliver at least twice this amount.

SPECIFICATIONS

Enclosure & Physical

Agency Approvals

Environmental

CAUTION: Do not exceed 36VDC peak, to avoid damage to the module.

External Fuse: Select a high surge tolerant fuse rated for 250mA or less to protect unit.

Supply	967EN-4008 / 968EN-4008 Current Draw
18V	82mA Typical, 99mA Maximum
24V	63mA Typical, 76mA Maximum
36V	45mA Typical, 54mA Maximum

CAUTION: Risk of Electric Shock – More than one disconnect switch may be required to de-energize equipment before servicing.

SPECIFICATIONS

Environmental

These limits represent the minimum requirements of the standard, but product has typically been tested to comply with higher standards in some cases.

Isolation: Input channels (as a group), power, and network circuits are isolated from each other for common-mode voltages up to 250VAC, or 354V DC off DC power ground, on a continuous basis (will withstand 1500VAC dielectric strength test for one minute without breakdown). Complies with test requirements of ANSI/ISA-82.01-1988 for voltage rating specified. Note that input channels are not isolated channel-to-channel.

Installation Category: Designed to operate in an installation in a Pollution Degree 2 environment with an installation category (over-voltage category) II rating.

Electromagnetic Interference Immunity (EMI): Inputs/outputs have demonstrated resistance to inadvertent state changes with interference from switching solenoids, commutator motors, and drill motors.

Electromagnetic Compatibility (EMC) -

Immunity Per European Norm BS EN 61000-6-2:2005:

Electrostatic Discharge (ESD) Immunity: 4KV direct contact and 8KV air-discharge to the enclosure port per IEC61000-4-2.

Radiated Field Immunity (RFI): 10V/M, 80 to 1000MHz AM, 1.4 to 2GHz 3V/M, and 2 to 2.7GHz 1V/M, per IEC61000-4-3.

Electrical Fast Transient Immunity (EFT): 2KV to power, and 1KV to signal I/O per IEC61000-4-4.

Conducted RF Immunity (CRFI): 10V rms, 150KHz to 80MHz, per IEC61000-4-6.

Surge Immunity: 0.5KV per IEC61000-4-5.

Emissions Per European Norm BS EN 61000-6-4:2007

Radiated Frequency Emissions: 30 to 1000MHz per CISPR16 Class A

WARNING: This is a Class A product. In a domestic environment, this product may cause radio interference in which the user may be required to take adequate measures.

IMPORTANT: Power, input, and output (I/O) wiring must be in accordance with Class I, Division 2 wiring methods of Article 501-4(b) of the National Electrical Code, NFPA 70 for installations in the US, or as specified in section 18-1J2 of the Canadian Electrical Code for installations within Canada and in accordance with the authority having jurisdiction.

This equipment is suitable for use in Class I, Division 2, Groups A, B, C, and D, or non-hazardous locations only. (Industrial Models ONLY)

WARNING – EXPLOSION HAZARD – Substitution of any components may impair suitability for Class I, Division 2.

WARNING – EXPLOSION HAZARD – Do not disconnect equipment unless power has been switched off or the area is known to be non-hazardous.

Reference Standard: CNR indicates investigation to Canadian Standard C22.2, No's. 142-M1987 & 213-M1987; USR indicates investigation to United States UL Standards 508 Seventeenth Edition & ISA 12.12.01:2000.

MTBF (Mean Time Between Failure): MTBF in hours using MIL-HDBK-217F, FN2.

Temp	967EN-4008	968EN-4008
25°C	603,470 hrs	615,185 hrs
40°C	420,948 hrs	428,160 hrs

Per MIL-HDBK-217, Ground Benign, Controlled, G_BG_C

Connector: Shielded RJ-45 socket, 8-pin, 10BaseT/100BaseTX.

Wiring: Wired MDI-X w/ Auto-Crossover support.

Protocol: Modbus TCP/IP w/Web Browser Configuration.

Modbus Port: Up to 5 sockets supported, uses port 502 (reserved for Modbus). The port number can be optionally changed to any number from 0 to 99999 to fit the application.

Transient Protection: Transient Voltage Suppressors are applied differentially at both the transmit and receive channels. The metal shield is capacitively coupled to earth ground terminal via an isolation TVS and capacitor.

Data Rate: Auto-sensed, 10Mbps or 100Mbps.

Duplex: Auto-negotiated, Full or Half Duplex.

Compliance: IEEE 802.3, 802.3u, 802.3x.

Modbus TCP/IP Protocol Support: Up to 5 sockets may be selected.

Web pages for configuration and control are built-in and may be accessed over Ethernet via a standard web browser. Most module functionality is configured via memory map registers or web pages, but some functionality may only be configured via web pages.

IP Address: The module IP address can be preset by the user (static) and loaded from internal non-volatile memory, or it can be automatically acquired at startup via a network server using a DHCP (Dynamic Host Configuration Protocol). The unit also includes a default mode toggle switch to cause the module to assume a "known" fixed static IP address of 128.1.1.100 for trouble-shooting purposes.

Communication Distance: The distance between two devices on an Ethernet network is generally limited to 100 meters using recommended copper cable. Distances may be extended using hubs, switches, or fiber optic transmission. However, the total round trip delay time must not exceed 512 bit times for collision detection to work properly.

Controls (Push-Button):

Default Address Switch: This momentary push-button switch is located on the front panel and is used to toggle the module into, or out of Default Communication Mode. In Default Mode, the module assumes the fixed static IP address "128.1.1.100", a default subnet mask "255.255.255.0", a default username of "User", and a default password of "password00". This switch can also be used to restore the module to its initial factory configuration by holding this switch in its default position while powering up the unit (see "Getting Out Of Trouble" in the Troubleshooting section for more information).

Indicators (LED's):

RUN (Green) - Constant ON if power is on and unit is OK. Continuous flashing ON/OFF indicates unit is in "wink" ID mode.

Reliability Prediction

SPECIFICATIONS

Ethernet Interface

Refer to Acromag Application Note 8500-734 for instructions on how to change the IP address of your PC network interface card in order to talk to an Acromag module.

Controls & Indicators

ST (Orange) – Slowly blinks ON/OFF in default mode and stays ON if an under/over-range condition occurs.

LINK (Green) – Indicates Ethernet link status (ON if auto-negotiation has successfully established a connection)

ACT (Orange) – Indicates current activity on the Ethernet port (ON if data is being transmitted or received).

The minimum cable required for full operation of this device is Category 5. The term "Category" refers to classifications of UTP (Unshielded Twisted Pair) cables. There are 3 main categories of cable – Category 3, Category 4, and Category 5. The differences in classification are found in their electrical performance and this is documented in the TIA/EIA 568A standard. Category 5 cable includes four twisted wire pairs at eight twists per foot.

ACCESSORY CABLES

This device is designed for use in harsh industrial environments. Acromag recommends the use of shielded cable when wiring to this device. Select STP (Shielded Twisted Pair) cable rather than UTP (Unshielded Twisted Pair). The use of shielded cable will help protect the data being transmitted from harmful EMI (Electromagnetic Interference) and RFI (Radio Frequency Interference). It will also help to lower your radiated emissions by keeping the cable from emitting EMI and RFI.

There are two types of cable: solid cable and stranded cable. Stranded cables are more flexible than solid cables. But since attenuation is higher for stranded cables than solid conductor cables, these are generally reserved for short runs and patch applications less than 6 meters.

Currently there are two types of shielding employed in Category 5 STP cable: single-shielded cable and double-shielded cable. Both of these cables have the same core and jacket as UTP cables, but also include a thin foil outer shield that covers all four twisted-wire pairs. Some variations will also include a drain wire that encircles the outer foil. The double-shielded version adds an outer wire screen that wraps around the foil shield and also functions as a drain wire. The drain wire or wire screen typically makes contact at each end of the cable with the metal shield around special RJ45 plug connectors. The metal shield of these connectors then makes contact with the metal shield of shielded RJ45 sockets. The socket shield may make direct contact with earth ground, or it may be capacitively coupled to earth ground. In the Acromag 9xxEN modules, this shield contacts earth ground via a high voltage capacitor and transient voltage suppressor. In addition to minimizing radio frequency and electromagnetic interference, this arrangement also has the added benefit of enhanced protection from ESD (Electro-Static Discharge).

Further, Acromag recommends the use of *enhanced* Category 5 cable (CAT-5e). This cable has all the characteristics of Category 5, but includes enhancements that help to minimize crosstalk. It is rated for frequencies up to 200MHz, double the rate of Category 5. Category 5e cable also has a greater number of turns-per-inch in its twisted pairs, making its performance more suitable for applications that make use of all four wire pairs for simultaneous bidirectional data transmission (full-duplex). This cable is defined in TIA/EIA-568A-5 (Addendum 5).

ACCESSORY CABLES

Patch Cables & Crossover Cables

Acromag offers the following cable accessories for use with this module:

Cable Model 5035-355 – A yellow, 3 foot long, single-shielded Category 5e STP patch cable with drain wire and an RJ45 plug at both ends. Use this cable to connect an Acromag 9xxEN I/O module to the Acromag 900EN-S005 switch.

Cable Model 5035-360 – A green, 5 foot long, single-shielded Category 5e STP crossover cable with a drain wire and an RJ45 plug at both ends. This cable performs the Ethernet crossover function and is used to connect a PC directly to an Acromag Series 9xxEN I/O module.

Note that you do not need to use a crossover cable to connect your PC to this module, or if you're using the Acromag 900EN-S005 switch, as the 967/8EN is auto-crossing.

You may obtain cable in other lengths and colors as required for your application from other vendors. For example, shielded CAT-5e cable is available from the following vendors:

- L-com Connectivity Products, www.L-com.com
- Pro-Link, www.prolink-cables.com

For very noisy environments or in the presence of strong electrical fields, you can obtain double-shielded CAT-5e cable and shielded RJ45 plugs from the following vendors:

- L-com Connectivity Products, www.L-com.com, see cable model TFSC2004 and shielded plug T8P8CSR.
- Regal Electronics, www.regalusa.com, see shielded plug model 1003B-8P8CSR-C5.

Complete premium double-shielded Category 5e standard and crossover cables in variable lengths can be obtained from Lumberg at www.lumbergusa.com (refer to their etherMate line). For example, specify RJ45S-RJ45S-656/B/3M for a double-shielded, 3 meter straight cable. Specify RJ45S-RJ45S-656/BX/3M for a double-shielded, 3 meter crossover cable.

Revision History

The following table shows the revision history for this document:

Release Date	Version	EGR/DOC	Description of Revision
07 OCT 11	D	CAP/KLK	Updated cULus per latest standards (ECN 11D016).
04 JAN 13	E	TPH/KLK	Update input over/under range specifications (ECN 12A011).
21 APR 14	F	CAP/SRW	Update ATEX per latest standards (ECO 14D012).
10 JAN 2019	G	CAP/ARP	Update "WARNING - EXPLOSION HAZARD - Substitution of <u>any</u> components..." per uL.